

EM9209: High Sensitivity, 1.5-72kbps, 2.4GHz FSK Transceiver

Description


The EM9209 is a 1.5kbps to 72kbps low-power, low-voltage, single chip 2.4GHz ISM band RF transceiver ideal for battery operated wireless applications such as wireless sensors and control, gaming, human interface devices, and security networks.

The EM9209's built-in custom low power micro-controller supports the proprietary wireless protocol links in the license-free 2.4000GHz to 2.4835GHz ISM band. It includes a low-IF receiver architecture and uses FSK modulation. A SPI interface provides a simple control of the baseband using an external host controller.

The EM9209 provides two communication modes with normal or high sensitivity and programmable bit rate from 1.5kbps to 72kbps.

The EM9209 provides a divided clock output programmable at either 32.5kHz, 325kHz or 3.25MHz to drive external micro-controllers time reference.

Simplified Application Schematic

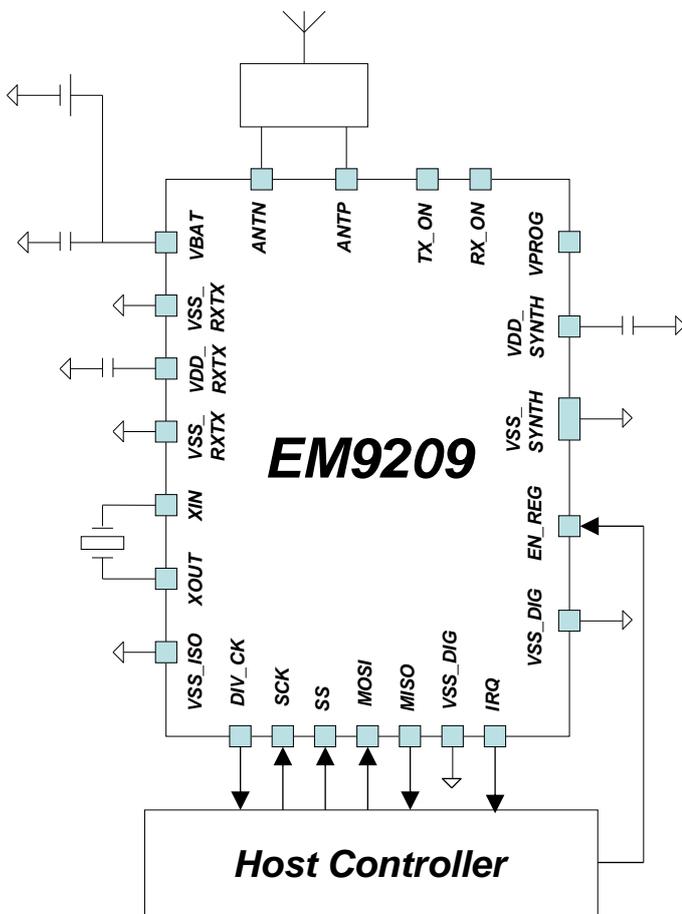

Features

- Low Voltage:
 - 1.9V to 3.6V battery operation
- Low Power:
 - 7mA in RX normal sensitivity mode (NS)
 - 8mA in RX high sensitivity mode (HS)
 - TX Mode: 11mA @-1dBm, 36mA @+10dBm
 - <150µA in Stand-by Mode
 - <10nA in Power Down Mode
- High Performance:
 - 115dBm sensitivity at 1.5kbps
 - +10dBm maximum received input signal
 - Programmable output power from -20dBm to +10dBm
- Ultra compact radio design with low BOM cost:
 - COB with 4mm x 4mm footprint
 - Operating Temperature: -40°C to +85°C
 - Direct antenna interface (200 Ω differential)
- Low-cost 26MHz crystal oscillator, frequency tolerance over temperature and aging of ±20ppm, with adjusted initial value
- Flexible interface:
 - SPI interface for microcontrollers
 - Fully programmable link layer
 - External PA and LNA control signal available on 2 pads
- Available as die or in MLF24 4x4mm package

Typical Applications

- Remote sensing and control
- Wireless mice, keyboards, toys etc...
- Wireless watch sensors, sports equipment
- Alarm and security systems

MLF24 Pinout

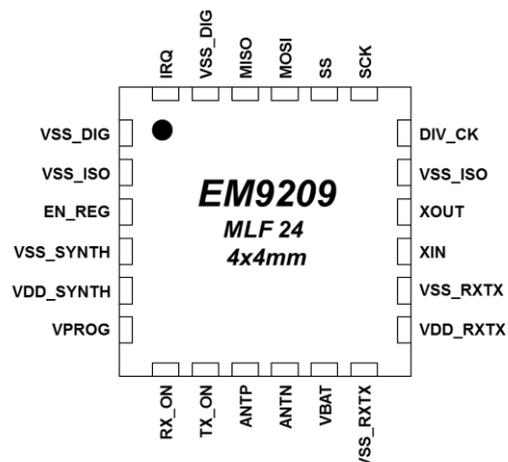




Table of Contents

- 1. Introduction 6
 - 1.1 Overview 6
 - 1.2 Applications schematic and block diagram 6
 - 1.3 RF transceiver 7
 - 1.3.1 Frequency synthesizer / Phase-Locked Loop (PLL) 7
 - 1.3.2 Receiver 7
 - 1.3.3 Transmitter 7
 - 1.4 Digital interface 7
 - 1.4.1 Baseband micro-controller 8
 - 1.4.1.1 In Communication mode: 8
 - 1.4.1.2 In Auto-calibration mode: 8
 - 1.4.1.3 In Standby mode: 8
 - 1.4.1.4 In RAM2 initialization mode 8
 - 1.5 Power management 8
 - 1.5.1 RF transceiver supply 8
 - 1.5.2 Digital supply 9
 - 1.5.3 Bias generator 9
- 2. Pin information 10
- 3. Electrical specifications 11
 - 3.1 Handling procedures and absolute maximum ratings 11
 - 3.2 General operating conditions 11
 - 3.3 Electrical characteristics 11
 - 3.4 Timing characteristics 13
- 4. Functional modes 14
 - 4.1 Operational modes 14
 - 4.1.1 Power down 14
 - 4.1.2 Standby mode 14
 - 4.1.3 RAM2 Init mode 14
 - 4.1.4 Auto-calibration modes 14
 - 4.1.5 Transmit (TX) mode 15
 - 4.1.6 Receive (RX) mode 15
- 5. User interface 16
 - 5.1 Digital interface 16
 - 5.1.1 SPI operations 16
 - 5.1.1.1 Status bits: Status[2:0] 17
 - 5.1.1.2 SPI command: Read_RXFIFO 17
 - 5.1.1.3 SPI command: Write_TXFIFO 18
 - 5.1.1.4 SPI command: Read_RXFIFO_Size 18
 - 5.1.1.5 SPI command: Read_TXFIFO_Size 18
 - 5.1.1.6 SPI command: Read_RAM1 19
 - 5.1.1.7 SPI command: Write_RAM1 19
 - 5.1.1.8 SPI command: Read_RAM2 19
 - 5.1.1.9 SPI command: Write_RAM2 19
 - 5.1.1.10 SPI command: Reset_Micro 19
 - 5.1.1.11 SPI command: Stop_Micro 19
 - 5.1.1.12 SPI command: Start_Micro 19
 - 5.1.1.13 SPI command: Clear_IRQ 19
 - 5.1.1.14 SPI command: Send_TXFIFO 20
 - 5.1.1.15 SPI command: Aux_com 20
 - 5.1.1.16 SPI command: ROM_Boot 20
 - 5.1.1.17 SPI command: ROM_Boot0_and_Start 20
 - 5.2 Programming interface 21
 - 5.2.1 RAM2, RAM1 reset 21
 - 5.2.2 RAM2 Initialization 21
 - 5.2.3 Internal PTAT current auto-calibration 21
 - 5.2.4 VCO code auto-calibration 22
 - 5.2.5 External Clock frequency (on DIV_CK terminal) 22
 - 5.2.6 Channel Data rate 23
 - 5.2.7 RF Frequency of operation 24
 - 5.2.8 Address Byte 24
 - 5.2.9 Bit stuffing 25
 - 5.2.10 TX power level 25
 - 5.2.11 External PA and LNA control 25
 - 5.2.12 Packet (TX and RX) payload 25
 - 5.2.12.18 Mode payload size in the header: 25
 - 5.2.12.19 Mode payload size in RAM2: 26



- 5.2.13 Registers: TXFIFO and RXFIFO26
- 5.2.14 Transmission flow, "high sensitivity", mode payload defined in RAM2, quick control (automatic ROMboot).26
- 5.2.15 Reception flow, "high sensitivity", mode payload defined in RAM2, quick control (automatic ROMboot).26
- 5.2.16 Transmission flow, "high sensitivity", mode entire TXFIFO, manual control (step by step).27
- 5.2.17 Reception flow, "high sensitivity", mode payload size in header, manual control (step by step).28
- 5.2.18 Transmission flow, "high sensitivity", mode payload size defined in RAM229
- 5.2.19 Reception flow, "high sensitivity", mode payload size defined in RAM229
- 5.2.20 Transmission flow, "normal sensitivity", mode entire TXFIFO29
- 5.2.21 Reception flow, "normal sensitivity", mode payload size in header29
- 5.2.22 Transmission flow, "normal sensitivity", mode payload size defined in RAM229
- 5.2.23 Reception flow, "normal sensitivity", mode payload size defined in RAM230
- 5.2.24 Received Signal Strength Indicator (RSSI)30
- 5.2.25 Transparent mode30
- 5.2.26 Frequency Error Register: DFT_Mes[7:0]30
- 5.2.27 Microcontroller ROMboot Instruction Disable: RB_Inst_Dis30
- 5.3 Description of RAM2 and registers mapping31
 - 5.3.1 Memory RAM2 [11:0] @ address 031
 - 5.3.2 Memory RAM2 [11:0] @ address 131
 - 5.3.3 Memory RAM2 [11:0] @ address 232
 - 5.3.4 Memory RAM2 [11:0] @ address 332
 - 5.3.5 Memory RAM2 [11:0] @ address 433
 - 5.3.6 Memory RAM2 [11:0] @ address 533
 - 5.3.7 Memory RAM2 [11:0] @ address 634
 - 5.3.8 Memory RAM2 [11:0] @ address 734
 - 5.3.9 Memory RAM2 [11:0] @ address 835
 - 5.3.10 Memory RAM2 [11:0] @ address 935
 - 5.3.11 Memory RAM2 [11:0] @ address 1036
 - 5.3.12 Memory RAM2 [11:0] @ address 1136
 - 5.3.13 Memory RAM2 [11:0] @ address 1237
 - 5.3.14 Memory RAM2 [11:0] @ address 1337
 - 5.3.15 Memory RAM2 [11:0] @ address 1438
 - 5.3.16 Memory RAM2 [11:0] @ address 1538
- 6. Packet information39
 - 6.1 Packet format39
- 7. Versions and ordering information40
- 8. Die Pinout40
- 9. Package information41
 - 9.1 Package marking41
- 10. Typical Applications42
 - 10.1 Application schematics42



Table of Figures

Figure 1: Simplified block diagram, die pin-out6
Figure 2: Digital Interface topology8
Figure 3: Example of state diagram of EM9209 modes14
Figure 4: SPI timing diagram16
Figure 5 : timing of the SPI **Read_RXFIFO** / **Write_TXFIFO** command18
Figure 5 : On-air data rate selection23
Figure 6: U9209 Die Pinout.....40
Figure 7: Example application schematic of the EM920942

Table of Tables

Table 1: EM9209 pinout (die version only)10
Table 2: Absolute maximum ratings.....11
Table 3: General operating conditions11
Table 4: Supply currents on **V_{BAT}**11
Table 5: DC characteristics12
Table 6: RF characteristics12
Table 9: SPI timing values.17
Table 10: **ck_Pad** Frequencies22
Table 11: Channel Data Rate23
Table 12: Channel Frequency Selection.....24
Table 13: “On air” versus Minimum Bit stuffed Data Rates25
Table 15: Packet format, normal sensitivity mode39
Table 16: Packet format, high sensitivity mode.....39
Table 17: Version information40
Table 18: Ordering information40
Table 19: EM9209 application schematic external component details.....43



Writing Conventions

This product specification follows a set of typographic conventions that make the document consistent and easy to read. The following writing conventions are used:

Commands, bit state conditions, and register names are written in **Courier New bold**.

Pin names and pin signal conditions are written in *Courier New*.

Cross references are underlined and highlighted in [blue](#).

All numerical values are given in decimal base, unless specified.

“NS” means Normal Sensitivity

“HS” corresponds to High Sensitivity

1. Introduction

1.1 Overview

The EM9209 is a low-power, low-voltage, single chip 2.4GHz RF transceiver ideal for battery operated wireless applications such as wireless sensors or control, gaming, human interface devices and security networks.

The EM9209 employs a FSK modulation scheme which is directly applied to the 2.4GHz transmitter. RF output power is digitally tuned over a wide range (-20dBm to +10dBm) to optimize current consumption and transmitted power for the application. The on-air transmission rate is digitally programmable from 1.5kbps to 72kbps.

The EM9209 features a fully integrated low-noise, high-sensitivity 2.4GHz front end with -115dBm at 1.5kbps in high sensitivity mode. Due to its robust low-IF receiver architecture, the EM9209 does not require expensive external filters to block undesired RF signals. Additionally, the integration of an agile frequency synthesizer makes the EM9209 well suited for frequency hopping applications.

The EM9209 provides a divided clock output programmable between 32.5kHz and 3.25MHz allowing external RC clocked micro-controllers to get a precise time reference.

The EM9209 is an attractive choice for a broad range of wireless high sensitivity and low data rate applications. In addition, the low bill-of-materials (BOM) required implementing a complete solution with the EM9209 results in minimal overall system cost.

1.2 Applications schematic and block diagram

A simplified applications schematic and block diagram of the EM9209 (Die Version) is shown in Figure 1. Required external components include only a crystal for the frequency synthesizer and 3 capacitors for supply decoupling. The major blocks that build the EM9209 are the RF transceiver, the digital interface including custom micro-controller and the power management circuitry. An overview of each of these blocks is provided in this section.

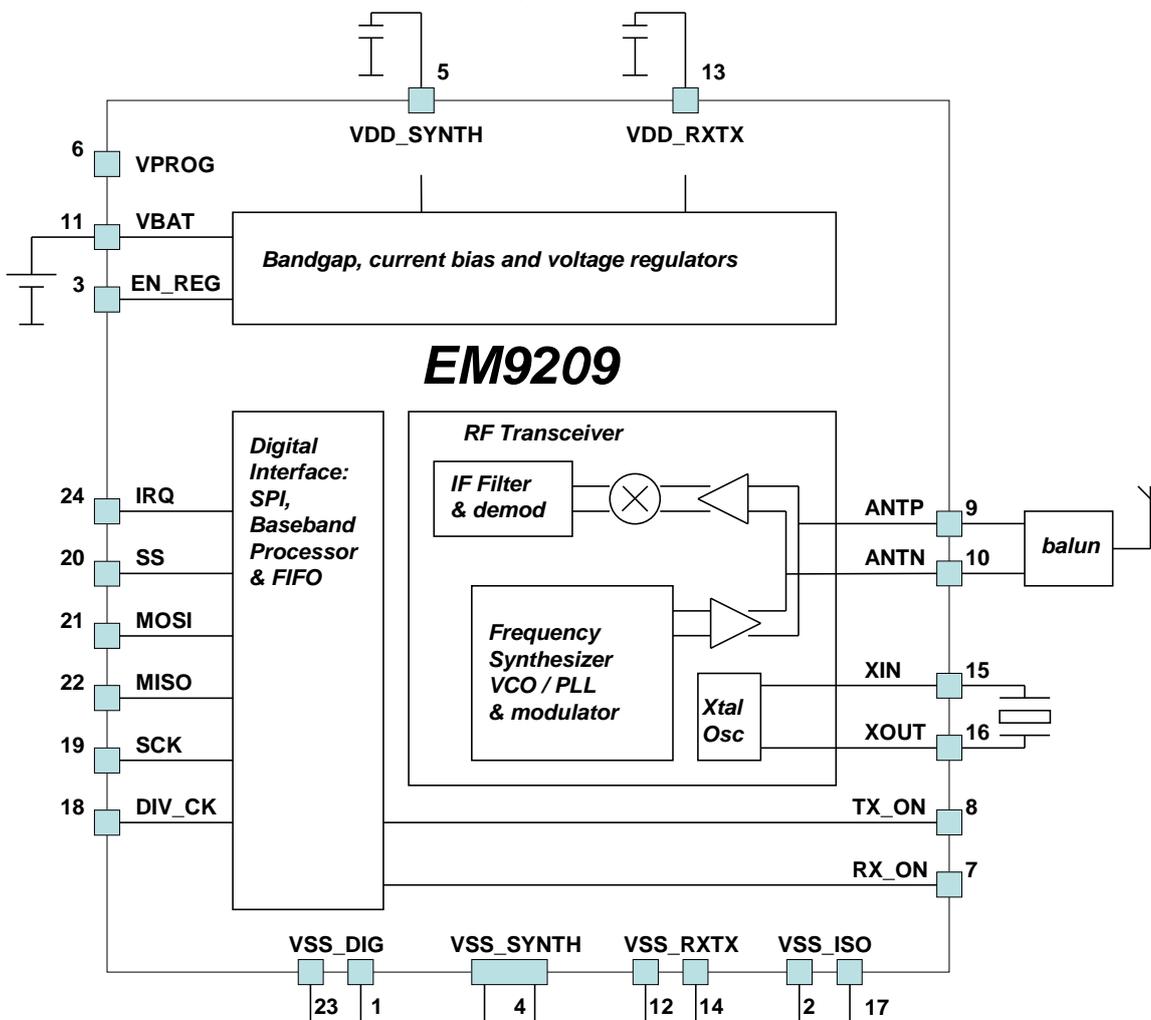


Figure 1: Simplified block diagram, die pin-out

1.3 RF transceiver

The highly integrated multi-channel RF transceiver is ideal for wireless applications in the world-wide, license-free, ISM frequency band at 2.4000GHz to 2.4835GHz. Its robust low-IF architecture and direct FSK modulation scheme are designed for proprietary communication protocols. The EM9209 supports data transmission rates of 1.5kbps to 72kbps for up to 20 channels.

The RF transceiver can be programmed to one of two primary modes:

Transmit mode: the entire transmit-chain is active and the digital baseband data can be up-converted to a 2.4GHz FSK modulated signal.

Receive mode: the frequency synthesizer and the entire receive-chain are active and ready to receive a packet.

The RF transceiver consists of three major subsystems: the frequency synthesizer/phase-locked loop (PLL), the receiver and the transmitter. Each of these is described below.

1.3.1 Frequency synthesizer / Phase-Locked Loop (PLL)

The frequency synthesizer provides an accurate, low jitter (-100 dBc @ 1MHz offset) 2.4GHz RF signal used for both up-conversion (in Transmit mode) and down-conversion (in Receive mode). Up to 20 different RF channel frequencies can be synthesized in high sensitivity mode. Additionally, the PLL supports direct FSK modulation for use in the Transmit mode.

An auto-calibration mechanism is included in the PLL (see Section 5.2.4) to center the VCO control voltage.

1.3.2 Receiver

The receiver achieves high sensitivity (-115dBm at 1.5kbps in high sensitivity mode) and supports a wide input signal range (up to +10dBm at 2.4GHz). It is comprised of a low noise amplifier (LNA), followed by a down-conversion mixer and an IF-filter. The output of the IF-filter is fed to a limiting-amplifier which feeds the digital FSK demodulators (normal and high sensitivity). The received data or IF are available in a special "Transparent mode" (see [Section 5.2.25](#)).

The receiver includes a Received Signal Strength Indicator (RSSI), which can measure the down-converted RF power after the IF filter. The average power on the channel or burst power of a packet can be read via the SPI after the single-shot RSSI measurement has been completed (see [Section 5.2.24](#)).

1.3.3 Transmitter

The transmitter consists of an FSK modulator with a programmable bit-rate (1.5kbps to 72kbps) which is included in the frequency synthesizer (see [Section 1.3.1](#)) and a programmable Power Amplifier (PA) output stage. Eight power level from -20dBm to +10dBm, optimized for efficiency, are proposed among the 2^{10} (10 bit) possible power levels.

1.4 Digital interface

The Digital Interface is shown in Figure 2. It includes:

- A four pin Serial Peripheral Interface (SPI).
- A Custom Micro-Controller with built in CODEC, FIFO's and timers.
- Two **RAMs** (Program and Registers).
- One **ROM** and its Boot machine.

The SPI can operate at up to 10MHz (at a typical 25pF load) for reading and writing to the configuration (**RAM2**) and program (**RAM1**) memories.

The Custom Micro-Controller drives an interrupt pin (**IRQ**) which can be programmed to indicate the status of the EM9209 (e.g., that a packet has been sent or received or that auto-calibration has finished). This functionality allows the host controller to complete other operations or even enter its own low power mode. Additionally, a **DIV_CK** output pad allows the user to output a divided version of the internal crystal clock (26MHz). This divided frequency can be disabled or chosen @ 3.25MHz, 325kHz or 32.5kHz. Two other pins, **RX_ON** and **TX_ON**, allow the user to command an external PA or/and LNA.

The RAM memories are reset through internal POR on internal VDD_DIG digital supply.

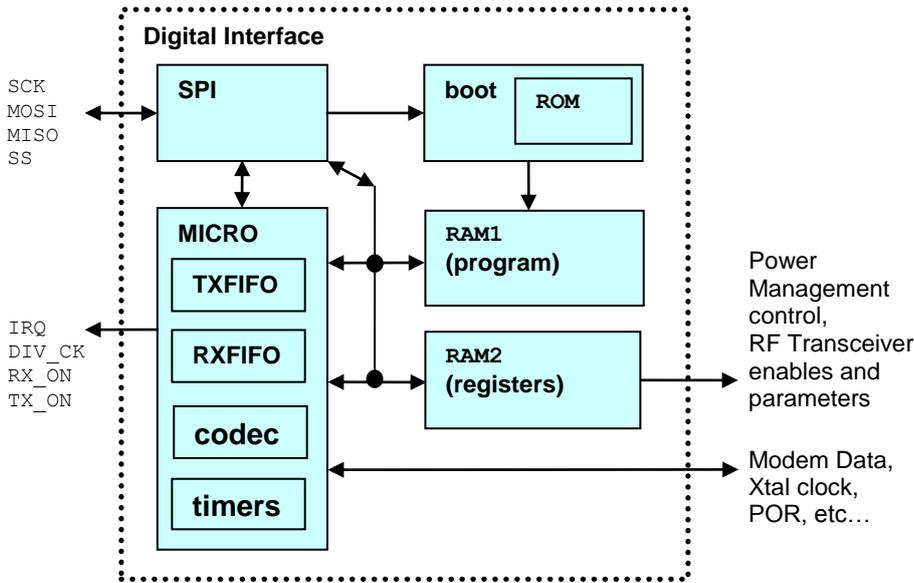


Figure 2: Digital Interface topology

1.4.1 Baseband micro-controller

The baseband custom micro-controller is the central digital control system of the EM9209. It manages all modes of the EM9209 through **RAM2** register memory and controls the RF transceiver and **TXFIFO** or **RXFIFO** operations. Furthermore, it configures digital data for transmission and processes packets received from the demodulator (what is commonly referred to as the link layer). The micro-controller is able to execute different subroutines which are handling production test, auto-calibration, communication (and FIFO control). Those different subroutines are stored in a **ROM** memory and are loaded in the **RAM1** program memory and activated through SPI interface.

There are various communication subroutines available for EM9209 (either high sensitivity or normal sensitivity). Most communication subroutines will set the EM9209 frequency synthesizer in Receive mode and turn on the Receiver. A simple communication subroutine allows the EM9209 to transmit and to go back to Standby mode with crystal oscillator enabled.

1.4.1.1 In Communication mode:

The **TXFIFO** can be written at any time by the host controller. When the SPI command **Send_TXFIFO** is activated, the internal micro-controller will transmit all the content of the **TXFIFO** (or, depending on the subroutine used, a predefined number of bytes, stored in **RAM2**) on the selected channel at the selected data rate.

The EM9209 will wait for any packet on the selected channel at the selected data rate. When a packet is received, the EM9209 examines the packet size header, and stores the corresponding number of bytes in the **RXFIFO** (or, depending on the subroutine used, a predefined number of bytes, stored in **RAM2**) and sets the **IRQ** signal Pin high.

The EM9209 **RXFIFO** and **RXFIFO_Size** can be read through SPI. The **IRQ** bit can be reset through the SPI **clear_IRQ** command.

1.4.1.2 In Auto-calibration mode:

The center frequency of the VCO is tuned for a chosen channel frequency.

The result of the auto-calibration is directly written in the VCO center frequency register **VCO_Code [3:0]**.

1.4.1.3 In Standby mode:

The EM9209 control registers (**RAM2**) can be read or written.

1.4.1.4 In RAM2 initialization mode

The EM9209 configures it's **RAM2** to default value and sets **IRQ** pin high when this action is finished.

1.5 Power management

The power management system of the EM9209 provides the necessary supplies, voltage and current references for reliable operation in all modes. It includes low drop-out voltage regulators (LDO) for the RF transceiver and all digital circuitry, a low noise bandgap, and a bias-generator. These circuits are powered through the VBAT pin.

1.5.1 RF transceiver supply

There are 2 on-chip regulators, for the transceiver and the synthesizer's analog part, which supply all analog circuits in the RF transceiver. The voltage reference for these regulators is derived from a low noise bandgap circuit. The regulators are enabled individually when needed.



1.5.2 Digital supply

A low power regulator generates the supply (VDD_dig) for all digital parts in the system (base-band, frequency synthesizer logic and demodulator). VDD_dig supply is fully internal and this regulator requires no external decoupling capacitor.

1.5.3 Bias generator

The EM9209 features a bias generator that utilizes a temperature compensated on-chip bandgap reference and a calibrated, temperature dependent, PTAT reference current.

**2. Pin information**

Table 1: EM9209 pinout (die version only)

Bond pad	Name	Notes	I/O	Pin Function	Description
1	VSS_DIG	1		Ground	Digital Ground
2	VSS_ISO	1		Ground	Isolation Ground
3	EN_REG		I	Digital Input	Master chip enable signal
4	VSS_SYNTH	1		Ground	Synthesizer Ground
5	VDD_SYNTH			Power Output	Regulated output voltage of synthesizer supply provided for external decoupling; not to be loaded by any external circuitry
6	VPROG		I	Prog voltage	Programing voltage. This terminal must be left floating
7	RX_ON		O	Open Drain	Digital Output for external LNA
8	TX_ON		O	Open Drain	Digital Output for external PA
9	ANTP	2	I/O	RF	Positive antenna terminal
10	ANTN	2	I/O	RF	Negative antenna terminal
11	VBAT			Power Input	Positive EM9209 supply: connect to 3V battery
12	VSS_RXTX	1		Ground	RF Ground
13	VDD_RXTX		I	Power Output	Regulated output voltage of transceiver supply provided for external decoupling; not to be loaded by any external circuitry
14	VSS_RXTX	1		Ground	RF Ground
15	XIN		I	Analog Input	Crystal oscillator input
16	XOUT		O	Analog Output	Crystal oscillator output
17	VSS_ISO	1		Ground	Insulation Ground
18	DIV_CK		O	Digital output	Programmable Clock output
19	SCK		I	Digital Input	SPI clock input
20	SS		I	Digital Input	SPI Slave Select, active high
21	MOSI		I	Digital Input	SPI data input
22	MISO		O	Digital output	SPI data output
23	VSS_DIG	1		Ground	Digital Ground
24	IRQ		O	Digital Output	Interrupt output for external host controller

Note 1: For a proper operation of the chip, this terminal shall be connected to a common ground plane.

Note 2: ANTP and ANTN are internally biased to VDD_RXTX with a typical impedance of 170k Ohm.

3. Electrical specifications

3.1 Handling procedures and absolute maximum ratings

This device has built-in protection against high static voltages or electric fields; however, anti-static precautions must be taken as with any CMOS component. Unless otherwise specified, proper operation can only occur when all terminal voltages are kept within the specified voltage range. Unused inputs must always be tied to a defined logic voltage level.

Table 2: Absolute maximum ratings

Parameter	Symbol	Min	Max	Unit
Supply Voltage $V_{BAT} - V_{SS}$	V_{BAT}	-0.3	3.8	V
Input Voltage	V_{IN}	$V_{SS} - 0.2$	$V_{BAT} + 0.2$	V
Electrostatic discharge to Mil-Std-883 method 3015.7 with ref. to V_{SS_DIG}	V_{ESD}	-1500	+1500	V
Maximum soldering conditions		As per Jedec J-STD-020		

Stresses above these listed maximum ratings may cause permanent damage to the device. Exposure beyond specified operating conditions may affect device reliability or cause malfunction

3.2 General operating conditions

Table 3: General operating conditions

Parameter	Symbol	Min	Typ	Max	Unit
Supply voltage V_{BAT}	V_{BAT}	1.9	2.5	3.6	V
Temperature range	T_A	-40		+85	°C

3.3 Electrical characteristics

The electrical characteristics of the EM9209 are summarized in this section. The electrical characteristics are summarized in the following tables.

Unless otherwise specified: $V_{BAT} = 1.9V$ to $3.6V$, $T_A = -40$ to $+85^\circ C$. Typical values are generally stated at room temperature ($T = 25^\circ C$) with a supply voltage of $V_{BAT} = 2.5V$.

Table 4: Supply currents on V_{BAT}

Operating mode	Notes	Symbol	Conditions	Min	Typ	Max	Unit
Power Down		I_{VBAT_PVDOWN}	EN_REG = 0			1	μA
Standby		I_{VBAT_STDBY}	26MHz crystal oscillator disabled		140		μA
Auto-calibration		$I_{AUTOCAL}$	Auto-calibration mode		4.2		mA
Transmit	1	I_{VBAT_TX3}	$P_{OUT} = -1.1dBm$, 2440 MHz		11		mA
		I_{VBAT_TX7}	$P_{OUT} = 10dBm$, 2440 MHz		36		mA
Receive	normal sensitivity	I_{VBAT_RXNS}	2440 MHz		7		mA
	high sensitivity	I_{VBAT_RXHS}	2440 MHz		8		mA

Conditions: $V_{BAT} = 2.5V$.

Note 1: See Table 13 for more detailed PA power settings.

Table 5: DC characteristics

Parameter	Symbol	Condition	Min	Typ	Max	Unit
HIGH level input voltage	V_{IH}		$0.8 * V_{BAT}$		$V_{BAT} + 0.2$	V
LOW level input voltage	V_{IL}		-0.2		$0.2 * V_{BAT}$	V
HIGH level output voltage	V_{OH}	$I_{OH}=100\mu A$	$V_{BAT}-0.3$		V_{BAT}	V
LOW level output voltage	V_{OL}	$I_{OL}=100\mu A$	0		0.3	V

Table 6: RF characteristics

Parameter	Conditions	Notes	Symbol	Min	Typ	Max	Unit
General RF conditions							
Operating frequency			f_{OP}	2400		2484	MHz
Differential antenna impedance					200		Ohm
Data rate	HS 1.5	2	DR_1	1.2	1.5	2	kbps
	HS 3	2	DR_2	2	3	4	kbps
	HS 6	2	DR_3	4	6	8	kbps
	HS 12	2	DR_4	8	12	16	kbps
	NS 24	2	DR_5		24		kbps
	NS 48	2	DR_6		48		kbps
	NS 72	2	DR_7		72		kbps
Channel spacing			F_{CHW}		4		MHz
Crystal frequency			f_{XTAL}		26		MHz
Crystal frequency accuracy		1				± 20	ppm
Transmitter Operation							
Output Power	Power Level = 7	3,6	P_{RF7}		+10		dBm
	Power Level = 6	3,6	P_{RF6}		+9		dBm
	Power Level = 5	3,6	P_{RF5}		+6.6		dBm
	Power Level = 4	3,6	P_{RF4}		+2.7		dBm
	Power Level = 3	3	P_{RF3}		-1.1		dBm
	Power Level = 2	3	P_{RF2}		-3.1		dBm
	Power Level = 1	3	P_{RF1}		-10.4		dBm
RF power accuracy			P_{RFAC}	-4		+4	dB
Receiver Operation							
Sensitivity for 0.1% BER at room temperature	HS 1.5	4,6	S_{HS1p5}		-115		dBm
	HS 3	4,6	S_{HS3}		-113		dBm
	HS 6	4,6	S_{HS6}		-111		dBm
	HS 12	4,6	S_{HS12}		-107		dBm
	NS 24	4,6	S_{NS24}		-100		dBm
	NS 48	4,6	S_{NS48}		-98		dBm



Parameter	Conditions	Notes	Symbol	Min	Typ	Max	Unit
	NS 72	4,6	S _{NS72}		-97		dBm
Maximum input power for 0.1% BER	HS	4,5			-10		dBm
	NS	4			-10		dBm

Measurement conditions: Load impedance = 100Ω differential (BALUN type: 2450FB15A0100E 2.45GHZ 1:2BALUN T&R JOHANSON). Output Power is measured at the output of the BALUN. Reference design available on request.

Note 1: Frequency accuracy includes stability over temperature range and aging of the quartz. Initial correction including the effect of printed circuit and crystal capacitors, must be stored in the Host in a Non Volatile Memory as a fixed correction to be added on the channel frequency code (see [Section 5.2.7](#)).

Note 2: Data rate “on air”. In case of more than 4 consecutive identical symbols, bit stuffing can reduce this data rate from 100% down to 80% of this value.

Note 3: See Table 13 for more detailed PA power settings.

Note 4: BER (Bit Error Rate) is measured in Transparent mode (see [Section 5.2.25](#)) with demodulated data on MISO and fixed data clock coupled from Data PN15 generator. Because of long preamble (internally fixed at 3 * Address [7 : 0] byte) used in EM9209 communication protocol, the PER corresponds to about BER + 3 dB sensitivity.

Note 5: Under certain crystal clock offset conditions and on specific channels, this parameter can be reduced to -35 dBm. Please ask for the corresponding application note.

Note 6: Data packet loss is inherent to any radio communication system, in particular in the presence of interferers. For specific applications, it is possible to reduce this packet loss, by selecting a certain data packet configuration and by using a data transfer protocol that tolerates packet errors. For any questions related to packet configuration, please send a message to info@emmicroelectronic.com.

Note 7: Depending on the setting of the output power an additional filter of harmonics may be needed to comply with local regulations. The EM9209 was designed for compliance with the following standards:

1. ETSI EN 300 440-1 V1.6.1
2. ETSI EN 300 328 V1.8.1,
3. FCC Regulations Part 15, §15.247

Customers are however recommended to test compliance of their final systems incorporating or embedding the EM9209 with these or others standards as they may apply and to obtain all necessary licenses and authorizations.

3.4 Timing characteristics

The timings below are requirements for the control software to ensure proper operation.

Table 7: Timing Characteristics

Parameter	Notes	Symbol	Conditions	Min	Typ	Max	Unit
Standby mode → TX/RX mode	1	t _{STDBY_RF}		0.8	1	10	ms
Power-down → Standby mode		t _{PD_STDBY}		1000			μs
Auto-calibration		t _{AUTOCAL}		340			μs

Conditions: V_{BAT} = 2.5V.

Note 1: Dominated by the crystal oscillator start-up time, which strongly depends on the quartz Q-factor. Typical values are for TSS-3225J, CL=10pF. Maximum is for TSS-3225J with significant margin for Q-factor spreading.

4. Functional modes

4.1 Operational modes

This section describes the operational modes of the EM9209. An example state diagram is given in Figure 3, and each mode is described below. Custom modes are available on special request. The SPI interface is used to set or change the mode by loading and running the corresponding subroutine. Most transitions are immediate, shorter than the SPI transactions, except for those marked in the figure and listed in Table 7: Timing Characteristics.

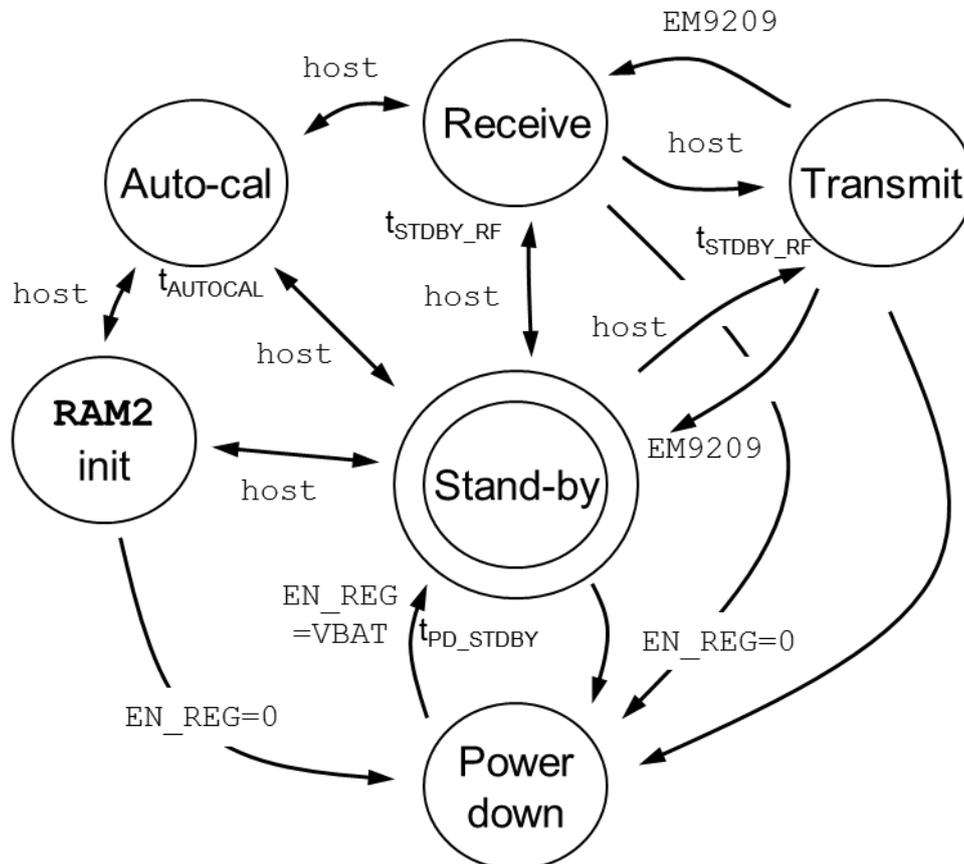


Figure 3: Example of state diagram of EM9209 modes

4.1.1 Power down

This mode is enabled when EN_REG terminal is tied to VSS or left floating (internal 3uA pull down). All regulators and the voltage reference are disabled and supply current on VBAT is in the nA range.

4.1.2 Standby mode

Upon connecting a battery to the VBAT pin and setting the pin EN_REG = VBAT, the regulated digital supply ramps up quickly (see Table 7). The SPI Register Memory is then set to 0 and the SPI waits the HOST programming. In Standby mode, all internal circuits are disabled and can be accessed, including the crystal oscillator. The host can program the EM9209 for any operational mode at any time.

4.1.3 RAM2 Init mode

The EM9209 is configured through a 16x12 bit RAM memory RAM2. This RAM is reset to 0 when EN_REG signal is set from VSS to VBAT. In order to avoid 16 SPI write_RAM2 operations (see Section 5.1.1.9), a dedicated microcontroller subroutine located at ROM_BOOT_Address = 0 will initialize most RAM2 addresses to their default value.

4.1.4 Auto-calibration modes

VCO center frequency

The EM9209 frequency synthesizer has an Auto-calibration mode that must be run periodically by the host. This keeps the channel frequency and FSK modulator operating within specification. Analog components in this block are sensitive to temperature variation, therefore performance may degrade or the link may fail if not run periodically. Typically, Auto-calibration should be run when changing channels or if the operating temperature changes by more than 10 to 20 °C. See Section 5.2.4 for programming details.



PTAT reference current

The internally generated PTAT current can be self-calibrated using an internal PTAT generator.

4.1.5 Transmit (TX) mode

In TX mode, the EM9209 outputs a FSK-modulated packet to the antenna pins, returns to Receive mode or to Standby mode with crystal oscillator enabled and sets the interrupt pin IRQ high. Depending on the chosen subroutine, the EM9209 can either transmit the whole **TXFIFO** (till **TXFIFO** size = 0) or a predefined number of bytes (packet size including the header) programmed in **RAM2**.

TX mode is activated from Receive mode or from Standby mode with crystal oscillator enabled using the SPI command **Send_TXFIFO**.

4.1.6 Receive (RX) mode

In RX mode, the EM9209 is ready to receive a FSK-modulated packet from the antenna. After receiving a packet, the EM9209 sets interrupt pin IRQ high. Depending on the chosen subroutine, the EM9209 can either read the size of the packet to be received in the packet header or in **RAM2** (see [Section 5.2.12](#)).

5. User interface

This section describes information the user needs for programming and interfacing the EM9209. The major subsections include the digital interface, the programming interface and register descriptions.

5.1 Digital interface

The EM9209 can be controlled with a 4-wire serial peripheral interface (SPI). The four wires are:

SS: Slave select

SCK: Serial clock

MOSI: Serial data in to EM9209

MISO: Serial data out of EM9209

Details of the SPI interface are provided in [Section 5.1.1](#).

The EM9209 has a programmable interrupt pin (IRQ). The IRQ pin is activated or disabled by the micro-controller.

The EM9209 has 2 programmable open drain type outputs RX_ON and TX_ON in order to connect external PA or LNA. Those outputs polarity can be set independently.

A more detailed description of setting the IRQ, RX_ON & TX_ON pins is available upon special request.

The EM9209 also has a dedicated DIV_CK output pin to output a divided version of the internal crystal clock (26MHz). This divided frequency can be disabled or chosen @ 3.25MHz, 325kHz or 32.5kHz (see [Section 5.2.5](#)).

All internal enables signals and parameters of the EM9209 are mapped in a small 16x12 bits memory called RAM2. RAM2 can directly be accessed through SPI and no crystal clock is required. See [Section 5.3](#) for RAM2 mapping description.

5.1.1 SPI operations

The SPI interface is used to read from and to write into all the registers of the EM9209.

SPI operations allow various accesses:

- Memories Write and Read actions
- Micro-controller commands
- Loading of subroutines in RAM1
- Test instructions (used in production)

A SPI transaction is defined as all of the activity on SCK, MOSI and MISO that occurs between one rising edge of SS and its next falling edge (see Figure 4 below). All the data shall be sent starting with the most-significant bit (MSB) first.

Not all the commands are encoded on a number of bits multiple of 8. Additional clocks can be sent after the command with no impact on the command decoding. Thus, the chip can be accessed without problems using an 8-bit wide SPI interface.

Each change to MOSI is latched on the rising edge of SCK, and each change to MISO is available on the falling edge of SCK. A timing diagram is shown in Figure 4. Complete timing specifications are given in Table 8.

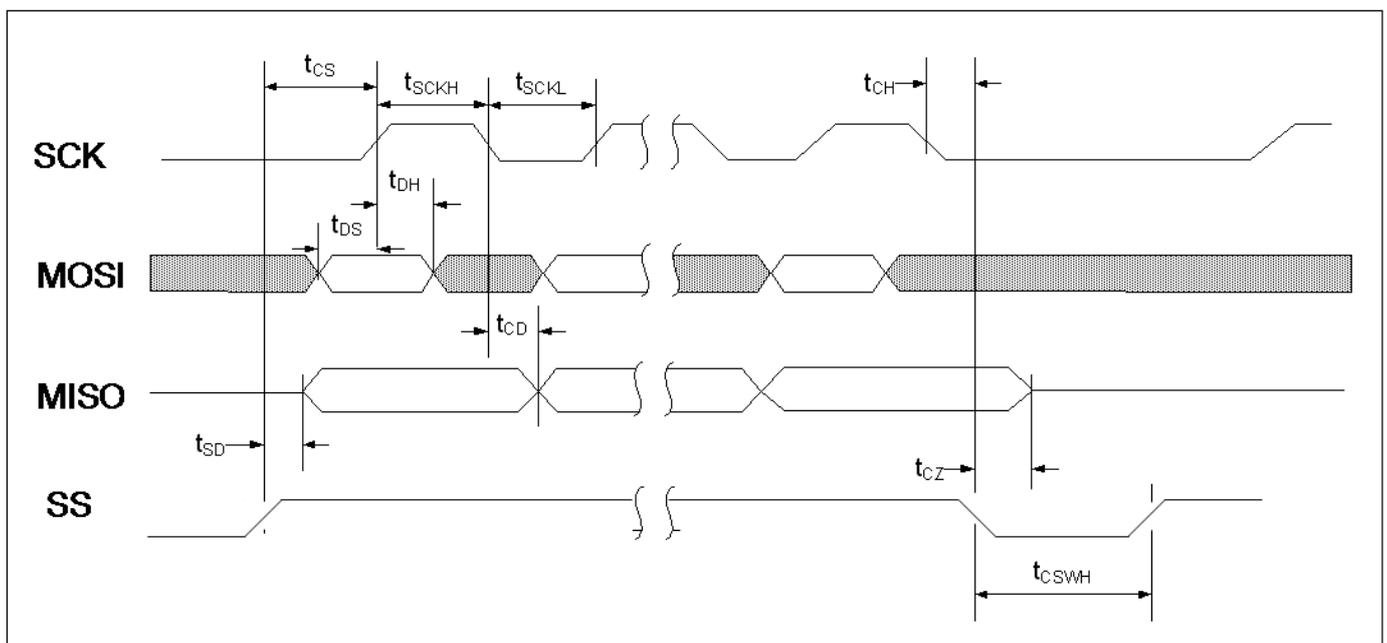


Figure 4: SPI timing diagram

Table 8: SPI timing values.

Condition: 25°C, 2.5V, 25pF.

Symbol	Parameters	Min	Max	Units
t _{DS}	MOSI to SCK Setup	20		ns
t _{DH}	SCK to MOSI Hold	20		ns
t _{SD}	SS to MISO Valid		30	ns
t _{CD}	SCK to MISO Valid		30	ns
t _{SCKL}	SCK Low Time	40		ns
t _{SCKH}	SCK High Time	40		ns
f _{SCK}	SCK Frequency	0	10	MHz
t _{CS}	SS to SCK Setup	20		ns
t _{CH}	SCK to SS Hold	20		ns
t _{CSWH}	SS Inactive Time	20		ns
t _{CZ}	SS to MISO High Z		30	ns

5.1.1.1 Status bits: status [2 : 0]

For each SPI command, MISO will always give 3 status bits on the first 3 SCK cycles.

- As soon as SS goes high, the first status bit (**status [2]**) is available on the MISO terminal. This bit is called "Previous_FIFO_Order_Pending" and is high when the microcontroller has not yet processed the previous FIFO order. This process takes a maximum of 8 sck cycles and starts on the falling edge of the SS signal.
- status [1]** reflects the inactivity of the crystal oscillator (**status [1] = '0'** means the crystal oscillator is running)
- status [0]** shows the unlock state of the 2.4GHz LO frequency synthesizer (**status [0] = 0** means the main LO PLL is locked).

For correct transmission operation, status[2:0] must be equal to '000'.

The possible SPI actions are described in the following chapters:

5.1.1.2 SPI command: Read_RXFIFO

MOSI	1	1	0	0	x	x	x	x	x	x	x	x	x	x	x	x	
MISO	Status [2..0]			RXFIFO_Size [4..0]				RXFIFO_Data [7..0]									

 This command returns the next byte out of the **RXFIFO**. It also returns the total number of bytes currently available in the **RXFIFO** (including this one / the one being read).

 This SPI operation works together with the internal micro-controller and is functional only when this latter has been started (SPI command **Start_Micro**) and when the master clock is active (Crystal oscillator must be enabled). The order is taken into account only when SS signal goes down and the **RXFIFO** size information are sampled by **mck** when SS is low.

The general timing is illustrated in Figure 5.

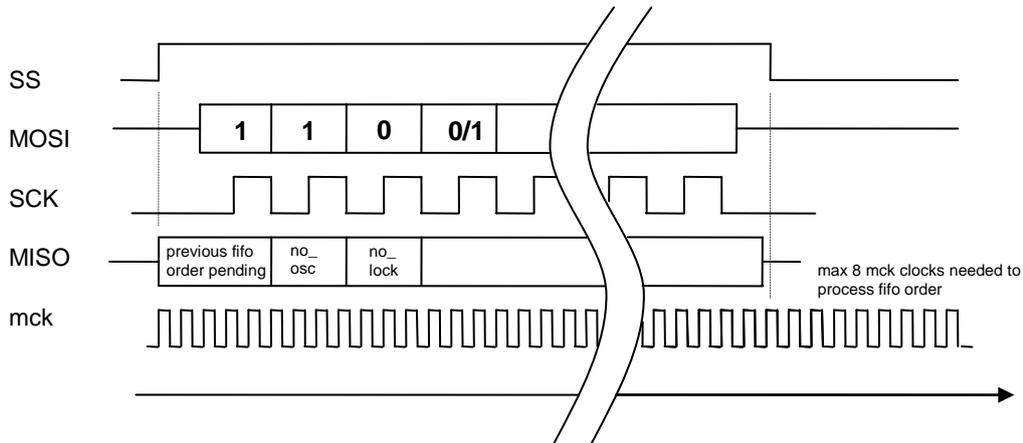


Figure 5 : timing of the SPI `Read_RXFIFO / Write_TXFIFO` command

5.1.1.3 SPI command: `Write_TXFIFO`

MOSI	1	1	0	1	<code>TXFIFO_Data[7..0]</code>								X	X	X	X
MISO	<code>Status[2..0]</code>			<code>RXFIFO_Size[4..0]</code>				<code>TXFIFO_Size[4..0]</code>				X	X	X	X	

This command writes a byte to the `TXFIFO`. It also returns the total number of bytes in both FIFOs, not including this one. This SPI operation works together with the internal micro-controller and is functional only when this latter has been started (SPI command `Start_Micro`) and when the master clock is active (Crystal oscillator must be enabled). The order is taken into account only when `SS` signal goes down and the `FIFO` size information are sampled by `mck` when `SS` is low. The general timing is illustrated in Figure 5.

5.1.1.4 SPI command: `Read_RXFIFO_Size`

MOSI	1	1	1	0	0	0	0	X	X	X	X	X	X	X	X	X
MISO	<code>Status[2..0]</code>			X	X	X	X	<code>RXFIFO_Size[4..0]</code>				X	X	X	X	

This command reads the total number of bytes currently available in the `RXFIFO`.

5.1.1.5 SPI command: `Read_TXFIFO_Size`

MOSI	1	1	1	0	0	0	1	X	X	X	X	X	X	X	X	X
MISO	<code>Status[2..0]</code>			X	X	X	X	<code>TXFIFO_Size[4..0]</code>				X	X	X	X	

This command reads the total number of bytes currently available in the `TXFIFO`.

5.1.1.6 SPI command: Read_RAM1

MOSI	0	0	1	address[5..0]				x	x	x	x	x	x	x	x	x	x	x	x	x	x
MISO	Status[2..0]			x	x	x	x	data_read[11..0]											x	x	x

This command reads the 12-bits word from the specified address (6 bits) of **RAM1**. This command will put the microcontroller on hold and reset state, until last bit has been processed.

5.1.1.7 SPI command: Write_RAM1

MOSI	0	0	0	address[5..0]				data_write[11..0]											x	x	x
MISO	Status[2..0]			x	x	x	x	data_write[11..0]											x	x	x

This command writes a 12-bits word to the specified address (4 bits) of **RAM1**. This command will put the microcontroller on hold and reset state until last bit has been processed.

5.1.1.8 SPI command: Read_RAM2

MOSI	0	1	1	address[3..0]				x	x	x	x	x	x	x	x	x	x	x	x	x	x		
MISO	Status[2..0]			x	x	x	x	data_read[11..0]											x	x	x	x	x

This command reads the 12-bits word from the specified address (4 bits) of **RAM2**. This command will put the microcontroller on hold until last bit has been processed.

5.1.1.9 SPI command: Write_RAM2

MOSI	0	1	0	address[3..0]				data_write[11..0]											x	x	x	x	x
MISO	Status[2..0]			x	x	x	x	data_write[11..0]											x	x	x	x	x

This command writes a 12-bits word to the specified address (4 bits) of **RAM2**. This command will put the microcontroller on hold until last bit has been processed.

5.1.1.10 SPI command: Reset_Micro

MOSI	1	1	1	0	0	1	0	x
MISO	Status[2..0]			x	x	x	x	x

This instruction allows an asynchronous reset of the microcontroller. Never use this command when the Micro is running (RAM2 and FIFO's content could be corrupted). Always first stop the Micro using SPI command **Stop_Micro** prior to use **Reset_Micro**.

5.1.1.11 SPI command: Stop_Micro

MOSI	1	1	1	0	0	1	1	x
MISO	Status[2..0]			x	x	x	x	x

This command stops the micro-controller.

5.1.1.12 SPI command: Start_Micro

MOSI	1	1	1	0	1	0	0	x
MISO	Status[2..0]			x	x	x	x	x

This command starts the micro-controller and executes the program currently stored in **RAM1**.

5.1.1.13 SPI command: Clear_IRQ

MOSI	1	1	1	0	1	0	1	x
MISO	Status[2..0]			x	x	x	x	x

Use this command to reset the **IRQ** signal. It works only when micro-controller is running.

5.1.1.14 SPI command: Send_TXFIFO

MOSI	1	1	1	0	1	1	0	x
MISO	Status[2..0]			x	x	x	x	x

This command will send the current contents of the **TXFIFO**. Depending on the selected subroutine, the program either sends the full content of the FIFO, or the number of bytes specified in **RAM2**.

5.1.1.15 SPI command: Aux_com

MOSI	1	1	1	0	1	1	1	x
MISO	Status[2..0]			x	x	x	x	x

This command allows the Channel RSSI to be read and stored to **Limit_RSSI[3:0]**.

5.1.1.16 SPI command: ROM_Boot

MOSI	1	1	1	1	0	0	0	ROM_Boot_Address[8..0]							
MISO	Status[2..0]			x	x	x	x	x	x	x	x	x	x	x	x

This command copies the 64 12-bits instructions from the specified **ROM** address to **RAM1**. This allows for fast initialization of the micro-controller subroutines.
The crystal oscillator must be enabled to perform this operation. Additionally, **ROM_Boot** command stops and resets the micro-controller.

5.1.1.17 SPI command: ROM_Boot0_and_Start

MOSI	1	1	1	1	1	1	1	x
MISO	Status[2..0]			x	x	x	x	x

This command copies the 64 12-bits instructions from the **ROM** address **0** to **RAM1**. This allows for fast initialization of the micro-controller subroutines.
The crystal oscillator must be enabled to perform this operation. Additionally, **ROM_Boot0_and_Start** command resets and starts the micro-controller.

5.2 Programming interface

The Programming interface section describes how to program the EM9209 by writing to the EM9209 **RAM2** or by booting and running in **ROM** stored subroutines. The complete **RAM2** description can be found in [Section 5.3](#).

5.2.1 **RAM2, RAM1 reset**

The EM9209 automatically performs a power on reset to **RAM1**, **RAM2** when internal VDD_DIG voltage is established (after EN_REG terminal is set to VBAT from VSS) → see [Section 3.4](#) for minimal timing.

After reset, all RF communication setup parameters (RF channel, etc.) must be reconfigured (see [Section 5.2.2](#)), and the PLL auto-calibration cycle must be initiated again.

5.2.2 **RAM2 Initialization**

The EM9209 has a dedicated subroutine located at the **ROM_Boot_Address = 0** which will initialize the **RAM2** memory to its default state (see [Section 5.3](#)).

To request the **RAM2** initialization, EN_REG terminal must be enabled. VDD_SYNTH, VDD_RXTX regulators and crystal oscillator must be started by writing “11100000100” in the **RAM2** at the address **0** (see [Section 5.1.1.9](#)). Quartz activity can be monitored through **Status[1]** (see [Section 5.1.1.1](#)) by using a simple **Stop_Micro** SPI command, for example. When **Status[1]** has gone low, the **RAM2** initialization subroutine can be executed. This is achieved by the SPI command **ROM_Boot** described in [Section 5.1.1.16](#) with argument **ROM_Boot_Address = 0**.

There are then 2 possibilities to start the subroutine:

Manual Boot (only **RAM2** initialization subroutine is executed):

→ In this case, the ROMboot instruction of the microcontroller must be disabled. Use SPI command **Write_RAM1** with address = **13** and data_write = **1184** (this will initialize **RAM2** with **RB_Inst_Dis = 1**, see [Section 5.2.27](#)).

Use then the SPI command **Start_Micro** described in [Section 5.1.1.12](#). The end of initialization will be signaled with **IRQ** going high. SPI command **Clear_IRQ** (see [Section 5.1.1.13](#)) allows clearing the interrupt.

Automatic Boot (Following in ROM chained subroutines will be successively booted and executed):

→ Use then the SPI command **Start_Micro** described in [Section 5.1.1.12](#). In this case, **RAM2** initialization subroutine is executed and following subroutines will be automatically booted and executed. The default chain stored in **ROM** is:

- **RAM2** Initialization (located @ **ROM_Boot_Address = 0**)
- Internal PTAT current value auto-calibration (located @ **ROM_Boot_Address = 33**)
- VCO code auto-calibration on center band frequency (2440 MHz) (located @ **ROM_Boot_Address = 64**)
- High Sensitivity Communication Subroutine with payload defined in **RAM2** (located @ **ROM_Boot_Address = 128**).

Note 1: Using SPI short command **ROM_Boot0_and_Start** will also result in Automatic Boot.

5.2.3 **Internal PTAT current auto-calibration**

This auto-calibration is used to calibrate the current delivered by the internal PTAT generator (Proportional To Absolute Temperature).

To load the auto-calibration in **RAM1** memory, EN_REG terminal must be enabled. VDD_SYNTH, VDD_RXTX regulators must be enabled and crystal oscillator must be running (see [Section 5.2.2](#)). Use then the SPI command **ROM_Boot** ([Section 5.1.1.16](#)) with argument **ROM_Boot_Address = 33** (location of the auto-calibration subroutine in the **ROM**).

There are then 2 possibilities to start the subroutine:

Manual Boot (only internal PTAT current value auto-calibration subroutine is executed):

→ Set the ROOMBOOT instruction disable bit **RB_Inst_Dis = 1** using SPI command **Write_RAM2** (see [Section 5.2.27](#)). If **RB_Inst_Dis** has been previously set = **1**, this step can be omitted. Use then the SPI command **Start_Micro** described in [Section 5.1.1.12](#). The end of auto-calibration will be signaled with **IRQ** going high. SPI command **Clear_IRQ** (see [Section 5.1.1.13](#)) allows clearing the interrupt.

Automatic Boot (Following in ROM chained subroutines will be successively booted and executed):

→ Set the ROOMBOOT instruction disable bit **RB_Inst_Dis = 0** using SPI command **Write_RAM2** (see [Section 5.2.27](#)). If **RB_Inst_Dis** has been previously set = **0**, this step can be omitted. Use then the SPI command **Start_Micro** described in [Section 5.1.1.12](#). In this case, internal PTAT current value auto-calibration subroutine is executed and following chained subroutines will be automatically booted and executed. The default chain stored in **ROM** is:

- Internal PTAT current value auto-calibration (located @ **ROM_Boot_Address = 33**)
- VCO code auto-calibration on center band frequency (2440 MHz) (located @ **ROM_Boot_Address = 64**)
- High Sensitivity Communication Subroutine with payload defined in **RAM2** (located @ **ROM_Boot_Address = 128**).

The calibration of the PTAT is independent of the temperature and only needs to be executed once when the chip is powered. Because this value should be constant during product life, it is possible to do calibration only once and to store **RAM2@5<3:0>** value somewhere in a non-volatile memory. **Write_RAM2** SPI command with this pre-stored value could then be used to set the correct internal PTAT current.

5.2.4 VCO code auto-calibration

This auto-calibration is used to calibrate the analog circuits of the PLL. For correct transmission and reception, the PLL should be calibrated at each channel frequency to be used before the link is established or if the operating temperature changes by more than 10 to 20 °C.

To load the auto-calibration in **RAM1** memory, **EN_REG** terminal must be enabled. **VDD_SYNTH**, **VDD_RXTX** regulators must be enabled and crystal oscillator must be running (see [Section 5.2.2](#)). Use then the SPI command **ROM_Boot** ([Section 5.1.1.16](#)) with argument **ROM_Boot_Address = 64** (location of the auto-calibration subroutine in the **ROM**).

Auto-calibration frequency is set trough register **VcoCalibFreq[11:0]** which is located in **RAM1** at the address **53** (default value of **VcoCalibFreq[7:0] = 128** when VCO frequency auto-calibration subroutine is loaded). It must be programmed through the SPI **Write_RAM1** command to fit the required frequency operation. **VcoCalibFreq[11:0]** is:

VcoCalibFreq[7:0] = (round(4'259'840 / Fo) – 1'618); where Fo is the RF operating frequency in MHz.

VcoCalibFreq[11:8] = "1011".

Examples: Fo = 2480, hex **VcoCalibFreq[11:0] = 'B64'**.

Fo = 2440, hex **VcoCalibFreq[11:0] = 'B80'**.

Fo = 2400, hex **VcoCalibFreq[11:0] = 'B9D'**.

See table 12 below.

There are then 2 possibilities to start the subroutine:

Manual Boot (only VCO code auto-calibration subroutine is executed):

→Set the ROOMBOOT instruction disable bit **RB_Inst_Dis = 1** using SPI command **Write_RAM2** (see [Section 5.2.27](#)). If **RB_Inst_Dis** has been previously set = **1**, this step can be omitted. Use then the SPI command **Start_Micro** described in [Section 5.1.1.12](#). The end of initialization will be signaled with **IRQ** going high. SPI command **Clear_IRQ** (see [Section 5.1.1.13](#)) allows clearing the interrupt.

Automatic Boot (Following in ROM chained subroutines will be successively booted and executed):

→Set the ROOMBOOT instruction disable bit **RB_Inst_Dis = 0** using SPI command **Write_RAM2** (see [Section 5.2.27](#)). If **RB_Inst_Dis** has been previously set = **0**, this step can be omitted. Use then the SPI command **Start_Micro** described in [Section 5.1.1.12](#). In this case, VCO code auto-calibration subroutine is executed and following chained subroutines will be automatically booted and executed. The default chain stored in **ROM** is:

- VCO code auto-calibration on chosen frequency (located @ **ROM_Boot_Address = 64**)
- High Sensitivity Communication Subroutine with payload defined in **RAM2** (located @ **ROM_Boot_Address = 128**).

In both manual and automatic Boot, the end of the VCO code auto-calibration routine will be signaled with **IRQ** going high. SPI command **Clear_IRQ** (see [Section 5.1.1.13](#)) allows clearing the interrupt.

The calibration of the PLL may vary if the external conditions change (e.g., temperature), therefore calibration should be repeated periodically.

5.2.5 External Clock frequency (on DIV_CK terminal)

The Frequency of the optional clock output can be set through the register **Ck_Pad[1:0]** (**RAM2@0[4:3]**) as shown in Table 9.

Table 9: **Ck_Pad** Frequencies

Control Bits Ck_Pad[1:0]	Clock Frequency on Div_Ck Output
'00'	no clock
'01'	3.25 MHz
'10'	325 kHz
'11'	32.5 kHz

5.2.6 Channel Data rate

The EM9209 has a programmable channel data rate of 1.5kbps to 72kbps for transmission and reception in normal sensitivity mode. The channel data rate is set by **R_Bit_Clk[8:0]** (**RAM2@12[8:0]**) and **Ch_Rate[2:0]** (**RAM2@12[11:9]**) as shown in Table 10. The complete typical values **RAM2@12[11:0]** is also reported. In high sensitivity mode, only the 4 slower data rates are available (**Ch_Rate[2:0]** = '000' to '011').

Table 10: Channel Data Rate

On air bit rate [kbps]	Ch_Rate[2:0]	R_Bit_Clk[8:0]	RAM2@12[11:0] [hex]
1.5	'000'	'110000000'	0x180
2.99	'001'	'011000000'	0x2C0
6.02	'010'	'001011111'	0x45F
12.037	'011'	'000101111'	0x62F
24.074	'100'	'000010111'	0x817
48.15	'101'	'000001011'	0xA0B
72.22	'110'	'000000111'	0xC07

The exact recovered and transmitted bit rate is given by:

$$\text{On-air bit rate} = \text{fref} / 45 / (\text{unsigned}(\text{R_Bit_Clk}[8:0]) + 1) \text{ [bit/sec], with fref = 26MHz.}$$

Conversely, the **R_Bit_Clk[8:0]** register value is defined as:

$$\text{R_Bit_Clk}[8:0] = (\text{fref} / (45 * \text{On air bit rate})) - 1, \text{ with fref = 26MHz.}$$

To establish a communication, both linked devices must be set to the same data rate.

In high-sensitivity mode, the on-air bit rate can be increased or decreased around the center data rate defined by **Ch_Rate[2:0]**, by selecting **R_Bit_Clk[8:0]** values, as shown in figure below.

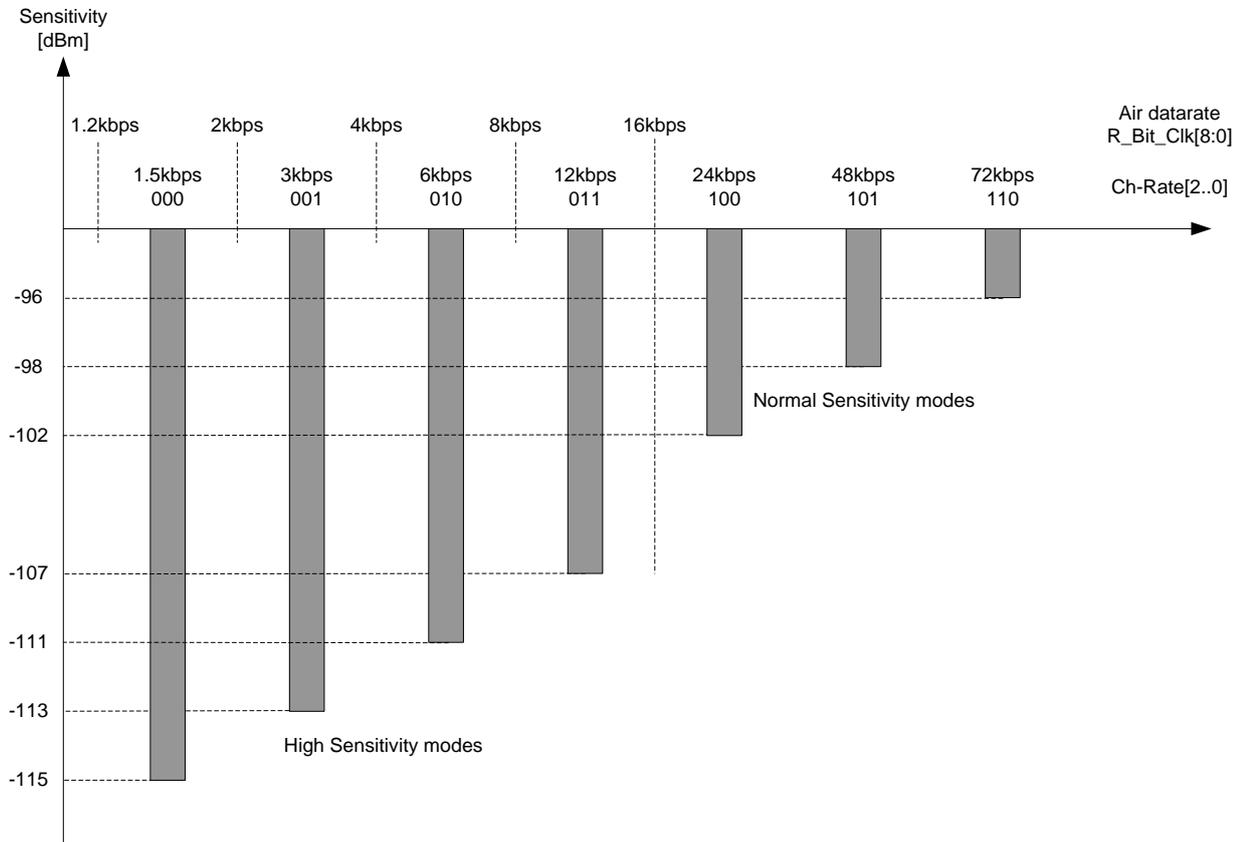


Figure 6 : On-air data rate selection

5.2.7 RF Frequency of operation

The channel register sets the center frequency of the transmission channel used by the EM9209. The channel is set by the **Frequ[16:0]** register. The RF center frequency is defined as:

Frequency should be between 2400MHz and 2484MHz

Frequency = $fref * (92 + \text{unsigned}(\text{Frequ}[16..0]) / 2^{15})$, with $fref = 26\text{MHz}$.

Conversely, the **Frequ[16:0]** register value is defined as:

Frequ[16..0] = $(\text{Frequency} * 2^{15} / fref) - 92$, with $fref = 26\text{MHz}$.

The channel step is given by $26\text{MHz} / 32768$ and is approximately equal to 793Hz.

The RF frequency must be corrected to compensate the initial crystal oscillator deviation. After printed circuit board assembly and frequency measurement, a value must be stored in the Host in a Non Volatile Memory as a fixed correction to be added on the channel frequency code.

To establish a communication, both linked devices must be set to the same channel. The host can program a channel change, which is validated when SPI signal *ss* goes down.

Channel spacing of 4 MHz is recommended to limit interference with other EM9209 devices operating on adjacent channels. The table below describes a possible definition of the channels.

Table 11: Channel Frequency Selection

Channel	Frequency [MHz]	Frequ[16:5] [hex]	Frequ[4:0] [hex]	VcoCalibFreq [11:0] [hex]
0	2401.5	0x176	0x04	0xB9C
1	2405.5	0x213	0x16	0xB99
2	2409.5	0x2B1	0x07	0xB96
3	2413.5	0x34E	0x18	0xB93
4	2417.5	0x3EC	0x09	0xB90
5	2421.5	0x489	0x1B	0xB8D
6	2425.5	0x527	0x0C	0xB8A
7	2429.5	0x5C4	0x1D	0xB87
8	2433.5	0x662	0x0E	0xB84
9	2437.5	0x700	0x00	0xB82
10	2441.5	0x79D	0x11	0xB7F
11	2445.5	0x83B	0x02	0xB7C
12	2449.5	0x8D8	0x13	0xB79
13	2453.5	0x976	0x04	0xB76
14	2457.5	0xA13	0x16	0xB73
15	2461.5	0xAB1	0x07	0xB71
16	2465.5	0xB4E	0x18	0xB6E
17	2469.5	0xBEC	0x09	0xB6B
18	2473.5	0xC89	0x1B	0xB68
19	2477.5	0xD27	0x0C	0xB65

5.2.8 Address Byte

The Address byte is used in the packet preamble in order to set the byte start in the bit to byte built in reconstruction algorithm. Decimal value of **Address[7:0]** must be different from 0, 48, 51, 99, 102, 146, 153, 204. For proper communication between two devices the receiving device must set the **Address[7:0]** register to match the transmitting device's **Address[7:0]** register.

5.2.9 Bit stuffing

To improve the receiver's clock recovery, the data transmitted is automatically bit stuffed with a hardwired algorithm. The internal bit stuffing procedure is allowing a maximum of 4 consecutive same symbols to be transmitted. It corresponds to a minimum efficiency of 80%, or a minimum bit rate described by Table 12.

Table 12: "On air" versus Minimum Bit stuffed Data Rates

On air bit rate [kbps]	Minimum bit stuffed data rate [kbps]
1.5	1.2
3	2.4
6	4.8
12	9.6
24	19.2
48	38.4
72	57.6

5.2.10 TX power level

The PA output power can be adjusted to many different levels from -20dBm to +10 dBm with different efficiencies.

Table 13 shows 8 typical levels with optimum efficiency. These levels are set by **I_Pre_PA[4:0]** and **I_PA[4:0]** register bits. Typical current consumption and PA efficiency for each of these power levels are also shown.

Table 13: RF power settings for the EM9209

Power Level	I_Pre_PA[4:0] [unsigned decimal]	I_PA[4:0] [unsigned decimal]	Output Power [dBm]	PA Power efficiency [%]	DC total Current Consumption [mA]
7	29	18	+10	27.3	36.3
6	21	5	+9.3	29.7	29.5
5	10	2	+6.6	24.2	20,7
4	7	1	+2.7	15.8	14.4
3	4	1	-1.1	9.4	11.2
2	3	1	-3.1	7	10.2
1	1	1	-10.4	1.9	8.1

Measurement conditions: 72kbps, f₀=2440MHz, V_{BAT} = 2.45V, V_{SS}=0V, T=25 °C, load impedance = 100Ω differential (BALUN type: 2450FB15A0100E 2.45GHZ 1:2BALUN T&R JOHANSON), other **RAM2** parameters set to default values. Output Power is measured at the output of the BALUN.

5.2.11 External PA and LNA control

A control signal for an external Power Amplifier or low noise Amplifier is available if a higher transmit output power is required than the EM9209 can output or when a higher sensitivity is needed. The **TX_ON** & **RX_ON** pins provide open drains controlled through the internal software. It is possible to control the polarity by programming the **RAM1** memory accordingly. Inverted polarity can be obtained on special request. When using an external Power Amplifier, the user is requested to comply with all ISM band regulations.

5.2.12 Packet (TX and RX) payload

5.2.12.18 Mode payload size in the header:

In this mode (defined by the SPI Command **ROM_Boot @256** or **320**), the transmit payload can be up to 31 bytes. A header byte which defines the packet size is added (See [Section 6](#)). The payload (and header) are read and written through the SPI command **Read_RXFIFO** and **Write_TXFIFO** (See [Section 5.1.1](#)).

**5.2.12.19 Mode payload size in RAM2:**

In this mode (defined by the `ROM_Boot @128` or `192`), the transmit payload can be up to 32 bytes, but the first byte following the Address byte has to be different from `Address [7:0]`. Payload size is defined in the register `N_Pay [4:0]` (`RAM2@14 [4:0]`). The payload is read and written through the SPI command `Read_RXFIFO` and `Write_TXFIFO` (See [Section 5.1.1](#)).

5.2.13 Registers: TXFIFO and RXFIFO

The EM9209 has two 32 Bytes FIFO's (`TXFIFO` and `RXFIFO`). The transmit `TXFIFO` can be accessed through the SPI command `Write_TXFIFO`. The receive `RXFIFO` can be accessed through the SPI command `Read_RXFIFO`.

The transmit FIFO must be loaded prior to transmission. The size of the transmit `TXFIFO` is monitored at each write FIFO command or can be viewed at any time through the command `Read_TXFIFO_Size` (see [Section 5.1.1.5](#)).

The receive `RXFIFO` can be read after an incoming packet has been received. The size of the receive `RXFIFO` is monitored at each `Read_FIFO` command or can be viewed at any time through the command `Read_RXFIFO_Size` (see [Section 5.1.1.4](#)).

Note: Both `TXFIFO` and `RXFIFO` are managed by the microcontroller, which means that this latter must be enabled (`Start_Micro`) and running (crystal oscillator enabled, `Status [1] = '0'`). Also, the SPI command `Reset_Micro` will reset all internal `TXFIFO` and `RXFIFO` pointers to 0.

5.2.14 Transmission flow, “high sensitivity”, mode payload defined in RAM2, quick control (automatic ROMboot).

This section describes the entire flow for transmitting data on the EM9209 in high sensitivity mode (whole `TXFIFO` is transmitted):

1. Start the EM9209 by setting `EN_REG` terminal equal to `VBAT`.
2. Perform a first `RAM2` initialization:
 - a. Start both `VDD_SYNT` and `VDD_RXTX` regulators + crystal oscillator by writing (SPI command `Write_RAM2`) “111000000100” in `RAM2@0` (see [Section 5.1.1.9](#)).
 - b. Wait 1 to 10ms for the crystal to start. Oscillator activity can be poled trough `Status [1]` (see [Section 5.2.2](#)).
 - c. Use the SPI command `ROM_Boot0_and_Start` (see [Section 5.1.1.17](#)). EM 9209 will set default initialization parameters, auto calibrate internal PTAT and VCO on 2440 MHz band, set `IRQ` pin high and boot the Communication subroutine located at `ROM_BOOT_address = 128`.
 - d. Use the SPI command `Clear_IRQ` (see [Section 5.1.1.13](#)) to clear the interrupt.
3. Write the `TXFIFO` through SPI `Write_TXFIFO` (see [Section 5.1.1.3](#)).
4. Use SPI `Send_TXFIFO` command to transmit the packet.
5. The EM9209 will:
 - a. Send the Packet with payload size defined in `RAM2`.
 - b. Set the `IRQ` pin high when transfer is complete.
6. User can reset the `IRQ` signal by using the SPI command `Clear_IRQ`.
7. Next Packet transmission only implies steps 3 to 6 to be repeated.

Note 1: The Data Bit Rate, transmit power and carrier frequency are the default values defined in [Section 5.3](#). Use SPI command `Write_RAM2` to redefine those parameters if needed.

Note 2: Transmission mode is started from reception mode. So, it is not possible to exclude that an incoming packet has triggered the `IRQ` before Sent Packet `IRQ` is activated (`IRQ` is the same for all operational modes). The SPI command `Read_TXFIFO_Size` and `Read_RXFIFO_Size` allows the user to look at both `TXFIFO` and `RXFIFO` to determine the origin of the interruption.

Note 3: Transmission mode is operated by the internal microcontroller, which operates by taking control of `RAM2` and `TXFIFO`. Read and Write SPI accesses to `RAM2` will put the microcontroller on hold. If the SPI transaction time is too long (if `SCK` frequency is close to channel data rate), correct transmission operation can be corrupted. SPI commands to retrieve `RAM2` values such as `Limit_RSSI [3:0]` or `DFT_Mes [7:0]` should be sent immediately after `IRQ` signal has gone high rather than after a `Send_TXFIFO` request.

5.2.15 Reception flow, “high sensitivity”, mode payload defined in RAM2, quick control (automatic ROMboot).

This section describes the entire flow for receiving data on the EM9209 in high sensitivity mode with payload size defined in header:

1. Start the EM9209 by setting `EN_REG` terminal equal to `VBAT`.
2. Perform a first `RAM2` initialization:



- a. Start both VDD_SYNTH and VDD_RXTX regulators + crystal oscillator by writing (SPI command **Write_RAM2**) "111000000100" in **RAM2@0** (see [Section 5.1.1.9](#)).
 - b. Wait 1 to 10ms for the crystal to start. Oscillator activity can be poled trough **Status[1]** (see [Section 5.1.1.1](#)).
 - c. Use the SPI command **ROM_Boot0_and_Start** (see [Section 5.1.1.17](#)). EM9209 will set default initialization parameters, auto calibrate internal PTAT and VCO on 2440 MHz band, set **IRQ** pin high and boot the Communication subroutine located at **ROM_BOOT_address = 128**.
 - d. Use the SPI command **Clear_IRQ** (see [Section 5.1.1.13](#)) to clear the interrupt.
3. The EM9209 will:
- a. Wait an incoming Packet with payload size defined in **RAM2** and store it in the **RXFIFO** (including the header).
 - b. Set the **IRQ** pin high when packet has been stored in the **RXFIFO**.
4. User can reset the **IRQ** signal by using the SPI command **Clear_IRQ**.
5. User can read the **RXFIFO** using the SPI command **Read_RXFIFO** (see [Section 5.1.1.2](#)).

Note 1: The Data Bit Rate, transmit power and carrier frequency are the default values defined in [Section 5.3](#). Use SPI command **Write_RAM2** to redefine those parameters if needed.

Note 2: Reception mode is operated by the internal microcontroller, which operates by taking control of **RAM2** and **TXFIFO**. Read and Write SPI accesses to **RAM2** will put the microcontroller on hold. If the SPI transaction time is too long (if **SCK** frequency is close to channel data rate), correct transmission operation can be corrupted. SPI commands to retrieve **RAM2** values such as **Limit_RSSI[3:0]** or **DFT_Mes[7:0]** should be sent immediately after **IRQ** signal has gone high.

5.2.16 Transmission flow, "high sensitivity", mode entire TXFIFO, manual control (step by step).

This section describes the entire flow for transmitting data on the EM9209 in high sensitivity mode (whole **TXFIFO** is transmitted):

1. Start the EM9209 by setting **EN_REG** terminal equal to **VBAT**.
2. Perform a first **RAM2** initialization:
 - a. Start both VDD_SYNTH and VDD_RXTX regulators + crystal oscillator by writing (SPI command **Write_RAM2**) "111000000100" in **RAM2@0** (see [Section 5.1.1.9](#)).
 - b. Wait 1 to 10ms for the crystal oscillator to start. Oscillator activity can be poled trough **Status[1]** (see [Section 5.1.1.1](#)).
 - c. Use the SPI command **ROM_Boot** with **ROM_Boot_Address = 0** (see [Section 5.1.1.16](#)).
 - d. Use SPI command **Write_RAM1** with address = **13** and data_write = **1184** (to set **RB_Inst_Dis = 1**, see [Section 5.2.27](#)).
 - e. Use the SPI command **start_Micro** (see [Section 5.1.1.12](#)).
 - f. Wait the interrupt **IRQ** signal to go high (this will mean that crystal oscillator has started and that **RAM2** initialization subroutine has been executed).
 - g. Clear **IRQ** using the SPI command **Clear_IRQ** (see [Section 5.1.1.13](#)).
3. Perform a PTAT auto-calibration sequence:
 - a. Use the SPI command **ROM_Boot** with **ROM_Boot_Address = 33**.
 - b. Use the SPI **start_Micro** command.
 - c. Wait the interrupt **IRQ** signal to go high (this will mean that PTAT auto-calibration subroutine has been executed).
 - d. Clear **IRQ** using the SPI command **Clear_IRQ**.
4. Use SPI write **RAM2** command to configure:
 - a. The data rate (**R_Bit_Clk[8:0]** (and **Ch_Rate[2:0]** for normal sensitivity), see [Section 5.2.6](#)).
 - b. The output power (**I_Pre_PA[4:0]** and **I_PA[4:0]**, see [Section 5.2.10](#)).
 - c. The Address byte **Address[7:0]** (see [Section 5.2.8](#)).
 - d. The channel frequency **Frequ[16:0]** (see [Section 5.2.7](#)).
5. Perform a VCO auto-calibration sequence:
 - a. Use the SPI command **ROM_Boot** with **ROM_Boot_Address = 64**.
 - b. Program the center frequency for the auto-calibration via SPI command **Write_RAM1** (see [Section 5.2.4](#))
 - c. Use the SPI **start_Micro** command.

- d. Wait the interrupt `IRQ` signal to go high (this will mean that VCO auto-calibration subroutine has been executed).
- e. Clear `IRQ` using the SPI command `Clear_IRQ`.
6. Boot high sensitivity communication software
 - a. Use SPI command `ROM_Boot` with `ROM_Boot_Address = 256`.
 - b. Start the microcontroller with the SPI command `Start_Micro`
7. Write the `TXFIFO` through SPI `Write_TXFIFO` (see [Section 5.1.1.3](#)). The first byte written is the header and contents the payload size in its 5 LSBs.
8. Use SPI `Send_TXFIFO` command to transmit the packet.
9. The EM9209 will:
 - a. Send the Packet until `TXFIFO` is empty.
 - b. Set the `IRQ` pin high when transfer is complete.
10. User can reset the `IRQ` signal by using the SPI command `Clear_IRQ`.
11. Next Packet transmission only implies steps 7 to 9 to be repeated.

Note 1: Transmission mode is started from reception mode. So, it is not possible to exclude that an incoming packet has triggered the `IRQ` before Sent Packet `IRQ` is activated (`IRQ` is the same for all operational modes). The SPI command `Read_TXFIFO_Size` and `Read_RXFIFO_Size` allows the user to look at both `TXFIFO` and `RXFIFO` to determine the origin of the interruption.

Note 2: Transmission mode is operated by the internal microcontroller, which operates by taking control of `RAM2` and `TXFIFO`. Read and Write SPI accesses to `RAM2` will put the microcontroller on hold. If the SPI transaction time is too long (if `SCK` frequency is close to channel data rate), correct transmission operation can be corrupted. SPI commands to retrieve `RAM2` values such as `Limit_RSSI[3:0]` or `DFT_Mes[7:0]` should be sent immediately after `IRQ` signal has gone high rather than after a `Send_TXFIFO` request.

5.2.17 Reception flow, “high sensitivity”, mode payload size in header, manual control (step by step).

This section describes the entire flow for receiving data on the EM9209 in high sensitivity mode with payload size defined in header:

1. Start the EM9209 by setting `EN_REG` terminal equal to `VBAT`.
2. Perform a first `RAM2` initialization:
 - a. Start both `VDD_SYNTX` and `VDD_RXTX` regulators + crystal oscillator by writing (SPI command `Write_RAM2`) “111000000100” in `RAM2@0` (see [Section 5.1.1.9](#)).
 - b. Wait 1 to 10ms for the crystal oscillator to start. Oscillator activity can be poled trough `Status[1]` (see [Section 5.1.1.1](#)).
 - c. Use the SPI command `ROM_Boot` with `ROM_Boot_Address = 0` (see [Section 5.1.1.16](#)).
 - d. Use SPI command `Write_RAM1` with address = `13` and data_write = `1184` (to set `RB_Inst_Dis = 1`, see [Section 5.2.27](#)).
 - e. Use the SPI command `Start_Micro` (see [Section 5.1.1.12](#)).
 - f. Wait the interrupt `IRQ` signal to go high (this will mean that crystal oscillator has started and that `RAM2` initialization subroutine has been executed).
 - g. Clear `IRQ` using the SPI command `Clear_IRQ` (see [Section 5.1.1.13](#)).
3. Perform a PTAT auto-calibration sequence:
 - a. Use the SPI command `ROM_Boot` with `ROM_Boot_Address = 33`.
 - b. Use the SPI `Start_Micro` command.
 - c. Wait the interrupt `IRQ` signal to go high (this will mean that PTAT auto-calibration subroutine has been executed).
 - d. Clear `IRQ` using the SPI command `Clear_IRQ`.
4. Use SPI write `RAM2` command to configure:
 - a. The data rate (`R_Bit_Clk[8:0]` (and `Ch_Rate[2:0]` for normal sensitivity), see [Section 5.2.6](#)).
 - b. The output power (`I_Pre_PA[4:0]` and `I_PA[4:0]`, see [Section 5.2.10](#)).
 - c. The Address byte `Address[7:0]` (see [Section 5.2.8](#)).
 - d. The channel frequency `Frequ[16:0]` (see [Section 5.2.7](#)).
5. Perform a VCO auto-calibration sequence:



- a. Use the SPI command `ROM_Boot` with `ROM_Boot_Address = 64`.
 - b. Program the center frequency for the auto-calibration via SPI command `Write_RAM1` (see [Section 5.2.4](#)).
 - c. Use the SPI `Start_Micro` command.
 - d. Wait the interrupt `IRQ` signal to go high (this will mean that VCO auto-calibration subroutine has been executed).
 - e. Clear `IRQ` using the SPI command `Clear_IRQ`.
6. Boot high sensitivity communication software
- a. Use SPI command `ROM_Boot` with `ROM_Boot_Address = 256`.
 - b. Start the microcontroller with the SPI command `Start_Micro`
7. The EM9209 will:
- a. Wait an incoming Packet and store the number of byte stored in the header in the `RXFIFO` (including the header).
 - b. Set the `IRQ` PIN high when packet has been stored in the `RXFIFO`.
8. User can reset the `IRQ` signal by using the SPI command `Clear_IRQ`.
9. User can read the `RXFIFO` using the SPI command `Read_RXFIFO` (see [Section 5.1.1.2](#)).

Note 1: Reception mode is operated by the internal microcontroller, which operates by taking control of `RAM2` and `TXFIFO`. Read and Write SPI accesses to `RAM2` will put the microcontroller on hold. If the SPI transaction time is too long (if `SCK` frequency is close to channel data rate), correct transmission operation can be corrupted. SPI commands to retrieve `RAM2` values such as `Limit_RSSI[3:0]` or `DFT_Mes[7:0]` should be sent immediately after `IRQ` signal has gone high.

5.2.18 Transmission flow, “high sensitivity”, mode payload size defined in RAM2

This section describes the entire flow for transmitting data on the EM9209 in high sensitivity mode with payload size defined in `RAM2`.

The steps are the same as described in Section 5.2.16, excepted:

The Payload size `N_Pay[4:0]` must be defined after step 4.

The header byte no longer defines the number of byte of the payload.

The `ROM_Boot_Address` must be set to **128** in step 6.

5.2.19 Reception flow, “high sensitivity”, mode payload size defined in RAM2

This section describes the entire flow for receiving a packet with the EM9209 in high sensitivity mode, with payload size defined in `RAM2`.

The steps are the same as described in Section 5.2.17, excepted:

The Payload size `N_Pay[4:0]` must be defined after step 4.

The header byte no longer defines the number of byte of the payload.

The `ROM_Boot_Address` must be set to **128** in step 6.

5.2.20 Transmission flow, “normal sensitivity”, mode entire TXFIFO

This section describes the entire flow for transmitting data on the EM9209 in normal sensitivity mode (whole `TXFIFO` is transmitted):

The steps are the same as described in Section 5.2.16, excepted:

The `ROM_Boot_Address` must be set to **320** in step 6.

5.2.21 Reception flow, “normal sensitivity”, mode payload size in header

This section describes the entire flow for receiving a packet with the EM9209 in normal sensitivity mode, with payload size defined in header.

The steps are the same as described in Section 5.2.17, excepted:

The `ROM_Boot_Address` must be set to **320** in step 6.

5.2.22 Transmission flow, “normal sensitivity”, mode payload size defined in RAM2

This section describes the entire flow for transmitting data on the EM9209 in normal sensitivity mode with payload size defined in `RAM2`.

The steps are the same as described in Section 5.2.16, excepted:

The Payload size `N_Pay[4:0]` must be defined after step 4.



The header byte no longer defines the number of byte of the payload.

The **ROM_Boot_Address** must be set to **192** in step 6.

5.2.23 Reception flow, “normal sensitivity”, mode payload size defined in RAM2

This section describes the entire flow for receiving data on the EM9209 in normal sensitivity mode with payload size defined in **RAM2**.

The steps are the same as described in Section 5.2.17, excepted:

The Payload size **N_Pay[4:0]** must be defined after step 4.

The header byte no longer defines the number of byte of the payload.

The **ROM_Boot_Address** must be set to **192** in step 6.

5.2.24 Received Signal Strength Indicator (RSSI)

A received signal strength indicator (RSSI) is available through the register **Limit_RSSI[3:0]** located in **RAM2@8[3:0]**. A RSSI measurement can be activated in two different ways:

Packet RSSI

→The communication subroutines defined by SPI command **ROM_Boot** with **ROM_Boot_Address = 128, 192, 256** and **320** will write the RSSI measured during the packet reception to **RAM2** register **Limit_RSSI[3:0]**. Header + Payload size (see [Section 6.1](#)) must be greater than 1 byte to get a correct **Limit_RSSI[3:0]** value.

Channel RSSI

→The special subroutine defined by **ROM_Boot** with **ROM_Boot_Address = 248** will write the measured RSSI value to **RAM2** register **Limit_RSSI[3:0]** when SPI **command2** is activated. This allows the user to determine the amount of RF activity on a given channel. This is useful for determining if there is other RF activity on the channel (e.g., WiFi).

The relationship between the applied RF power, P_{IN} at the antenna **Limit_RSSI[3:0]** pins and the value given by the RSSI can be expressed as:

$$P_{IN} [dBm] = -120dBm + \text{unsigned} (\text{Limit_RSSI}[3:0]) * 8dB, \text{ for } -105 \text{ dBm} < P_{IN} < -60 \text{ dBm}.$$

The accuracy of the RSSI is not guaranteed, and is provided for test purposes only. This accuracy could be improved by calibration means.

5.2.25 Transparent mode

The EM9209 can be configured in Transparent mode. This mode allows the users to directly control the data-stream by FSK Modulating the data present on MOSI in Transmit mode and to get the data directly at the output of the FSK demodulator in Receive mode. Some other configurations are used in testing phase. Information on transparent mode operation could be obtained on special request.

5.2.26 Frequency Error Register: **DFT_Mes[7:0]**

This Register located in **RAM2@9[7:0]** is updated by the subroutine in High Sensitivity communication mode each time that a Packet is received. **DFT_Mes[7:0]** contains the signed frequency error between the Transmitter and the Receiver RF frequencies. 1LSB corresponds to an offset frequency of $26\text{MHz}/32768 = 793\text{Hz}$.

5.2.27 Microcontroller ROMboot Instruction Disable: **RB_Inst_Dis**

In order to present a very simple programming interface, the subroutines are able to call each other through an internal microcontroller instruction ROMboot. This instruction is disabled when bit **RB_Inst_Dis = 1**. This allows the user to manually select the subroutine to be stored in **RAM1** memory.

Note 1: When default values initialization subroutine located at ROM address 0 is started, **RB_Inst_Dis** is set = **0** and next subroutine is automatically called, even if **RB_Inst_Dis** was set equal to **1** before starting the microcontroller. Use SPI command **Write_RAM1 @address 13** with value = **1184** (after SPI command **ROM_Boot** and prior to start the microcontroller) to force **RB_Inst_Dis = 1**.

5.3 Description of RAM2 and registers mapping

In this section all basic functionality and reset values for relevant registers of the EM9209 are described. Any register not specifically mentioned here is reserved and its contents must be set according to defined Default value.

5.3.1 Memory RAM2 [11:0] @ address 0

Mnemonic	Bit	Default Value	Reset Value	Description
VDD_Synth_En	11	1	0	VDD_Synth Voltage Regulator enable
VDD_RXTX_En	10	1	0	VDD_RXTX Voltage Regulator enable
Xtal_En	9	1	0	Crystal oscillator enable
Reserved	8	1	0	Reserved.
Reserved	7	1	0	
Reserved	6	1	0	
Reserved	5	0	0	
Div_Ck_Freq[0]	4	0	0	Selects the frequency of the clock output on DIV_CK
Div_Ck_Freq[1]	3	0	0	
Reserved	2	1	0	Reserved. Bit 2 should be set to '1' each time this register is written.
Reserved	1	0	0	
Reserved	0	0	0	

5.3.2 Memory RAM2 [11:0] @ address 1

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	0	0	Reserved.
Reserved	10	0	0	
Reserved	9	0	0	
Reserved	8	0	0	
Reserved	7	0	0	
Reserved	6	0	0	
Reserved	5	0	0	
Reserved	4	0	0	
Reserved	3	0	0	
TX_On_Pad	2	0	0	TX_On Pad control. Set by internal Micro-Controller.
RX_On_Pad	1	0	0	RX_On Pad control. Set by internal Micro-Controller.
Reserved	0	0	0	Reserved.

5.3.3 Memory RAM2 [11:0] @ address 2

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	1	0	Reserved.
Reserved	10	0	0	
Reserved	9	1	0	
Reserved	8	0	0	
Reserved	7	0	0	
Reserved	6	0	0	
Reserved	5	0	0	
Reserved	4	1	0	
Reserved	3	0	0	
Reserved	2	1	0	
Reserved	1	0	0	
Reserved	0	1	0	

5.3.4 Memory RAM2 [11:0] @ address 3

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	0	0	Reserved.
Reserved	10	0	0	
Reserved	9	1	0	
Reserved	8	0	0	
Reserved	7	1	0	
Reserved	6	1	0	
Reserved	5	0	0	
Reserved	4	0	0	
VCO_Code [3]	3	1	0	The VCO tuning code is determined automatically by auto-calibration procedure
VCO_Code [2]	2	0	0	
VCO_Code [1]	1	0	0	
VCO_Code [0]	0	0	0	

5.3.5 Memory RAM2 [11:0] @ address 4

Mnemonic	Bit	Default Value	Reset Value	Description
I_Pre_PA[4]	11	0	0	Current bias of the PA preamplifier. Defines RF Output Power in Transmit mode.
I_Pre_PA[3]	10	1	0	
I_Pre_PA[2]	9	1	0	
I_Pre_PA[1]	8	0	0	
I_Pre_PA[0]	7	1	0	
Reserved	6	0	0	Reserved.
Reserved	5	0	0	
Reserved	4	0	0	
Reserved	3	0	0	
Reserved	2	0	0	
Reserved	1	0	0	
Reserved	0	0	0	

5.3.6 Memory RAM2 [11:0] @ address 5

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	0	0	Reserved.
Reserved	10	1	0	
Reserved	9	0	0	
Reserved	8	0	0	
Reserved	7	0	0	
Reserved	6	1	0	
Reserved	5	0	0	
Reserved	4	0	0	
Main_PTAT[3]	3	1	0	Control of the main chip PTAT current bias.
Main_PTAT[2]	2	0	0	
Main_PTAT[1]	1	0	0	
Main_PTAT[0]	0	0	0	

5.3.7 Memory RAM2 [11:0] @ address 6

Mnemonic	Bit	Default Value	Reset Value	Description
I_PA[4]	11	0	0	Current bias of the PA. Defines RF Output Power in Transmit mode.
I_PA[3]	10	1	0	
I_PA[2]	9	0	0	
I_PA[1]	8	1	0	
I_PA[0]	7	1	0	
Reserved	6	0	0	Reserved.
Reserved	5	0	0	
Reserved	4	0	0	
Reserved	3	0	0	
Reserved	2	0	0	
Reserved	1	0	0	
Reserved	0	0	0	

5.3.8 Memory RAM2 [11:0] @ address 7

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	1	0	Reserved.
Reserved	10	0	0	
Reserved	9	0	0	
Reserved	8	1	0	
Reserved	7	0	0	
Reserved	6	0	0	
Reserved	5	0	0	
Reserved	4	0	0	
Reserved	3	0	0	
Reserved	2	0	0	
Reserved	1	0	0	
Reserved	0	0	0	

5.3.9 Memory RAM2 [11:0] @ address 8

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	0	0	Reserved.
Reserved	10	1	0	
Reserved	9	0	0	
Reserved	8	0	0	
Reserved	7	1	0	
Reserved	6	0	0	
Reserved	5	0	0	
Reserved	4	0	0	Reserved.
Limit_RSSI[3]	3	0	0	RSSI value.
Limit_RSSI[2]	2	0	0	
Limit_RSSI[1]	1	0	0	
Limit_RSSI[0]	0	0	0	

5.3.10 Memory RAM2 [11:0] @ address 9

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	1	0	Reserved.
Reserved	10	0	0	
Reserved	9	1	0	
Reserved	8	0	0	
DFT_Mes [7]	7	0	0	Error frequency measured by DFT in High Sensitivity mode.
DFT_Mes [6]	6	0	0	
DFT_Mes [5]	5	0	0	
DFT_Mes [4]	4	0	0	
DFT_Mes [3]	3	0	0	
DFT_Mes [2]	2	0	0	
DFT_Mes [1]	1	0	0	
DFT_Mes [0]	0	0	0	

5.3.11 Memory RAM2 [11:0] @ address 10

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	0	0	Reserved.
Reserved	10	0	0	
Reserved	9	1	0	
Reserved	8	0	0	
Reserved	7	1	0	
Reserved	6	0	0	
Reserved	5	0	0	
Reserved	4	0	0	
Reserved	3	0	0	
Reserved	2	1	0	
Reserved	1	0	0	
Reserved	0	0	0	

5.3.12 Memory RAM2 [11:0] @ address 11

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	0	0	Reserved.
Reserved	10	0	0	
Reserved	9	0	0	
Reserved	8	0	0	
Reserved	7	1	0	
Reserved	6	1	0	
Reserved	5	0	0	
Reserved	4	0	0	
Reserved	3	0	0	
Reserved	2	0	0	
Reserved	1	0	0	
Reserved	0	0	0	

5.3.13 Memory RAM2 [11:0] @ address 12

Mnemonic	Bit	Default Value	Reset Value	Description
Ch_Rate[2]	11	0	0	Bandwidth of the normal sensitivity demodulator.
Ch_Rate[1]	10	0	0	
Ch_Rate[0]	9	0	0	
R_Bit_Ck[8]	8	1	0	CODEC Bit clock frequency.
R_Bit_Ck[7]	7	1	0	
R_Bit_Ck[6]	6	0	0	
R_Bit_Ck[5]	5	0	0	
R_Bit_Ck[4]	4	0	0	
R_Bit_Ck[3]	3	0	0	
R_Bit_Ck[2]	2	0	0	
R_Bit_Ck[1]	1	0	0	
R_Bit_Ck[0]	0	0	0	

5.3.14 Memory RAM2 [11:0] @ address 13

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	0	0	Reserved.
Reserved	10	0	0	
Reserved	9	0	0	
Reserved	8	0	0	
Address [7]	7	1	0	Address Byte Value.
Address [6]	6	0	0	
Address [5]	5	1	0	
Address [4]	4	0	0	
Address [3]	3	1	0	
Address [2]	2	0	0	
Address [1]	1	0	0	
Address [0]	0	1	0	

5.3.15 Memory RAM2 [11:0] @ address 14

Mnemonic	Bit	Default Value	Reset Value	Description
Reserved	11	0	0	Reserved.
Reserved	10	0	0	
Frequ[4]	9	0	0	Synthesizer's RF Frequency LSB's.
Frequ[3]	8	1	0	
Frequ[2]	7	1	0	
Frequ[1]	6	1	0	
Frequ[0]	5	0	0	
N_Pay[4]	4	0	0	Payload size of the Packet: N_Pay + 1
N_Pay[3]	3	0	0	
N_Pay[2]	2	0	0	
N_Pay[1]	1	1	0	
N_Pay[0]	0	1	0	

5.3.16 Memory RAM2 [11:0] @ address 15

Mnemonic	Bit	Default Value	Reset Value	Description
Frequ[16]	11	0	0	Synthesizer's RF Frequency MSB's.
Frequ[15]	10	1	0	
Frequ[14]	9	1	0	
Frequ[13]	8	1	0	
Frequ[12]	7	0	0	
Frequ[11]	6	1	0	
Frequ[10]	5	1	0	
Frequ[9]	4	0	0	
Frequ[8]	3	0	0	
Frequ[7]	2	0	0	
Frequ[6]	1	1	0	
Frequ[5]	0	0	0	



6. Packet information

The following details on the packet are provided for informational purposes only. Knowledge of the information contained here is not necessary for proper usage of the EM9209.

6.1 Packet format

In normal sensitivity mode, each packet contains the following information:

Preamble	3 * Address Byte	Header	Payload
----------	------------------	--------	---------

Table 14: Packet format, normal sensitivity mode

Packet Information	Length	Description
Preamble = 5 * "11001100"	5 byte	Clock recovery and data-slicer initialization.
3 * Address Byte	3 byte	The preamble consists of 3 Address byte Address [7:0] .
Header	0 or 1 byte	The 5 LSB's of the header represent the payload size of the packet for communication subroutine available @ ROM_Boot_Address = 320 . For communication subroutine available @ ROM_Boot_Address = 192 , header is not existing.
Payload	0-32 bytes	Data

In high sensitivity mode, each packet contains the following information:

Marking	Preamble	3 * Address Byte	Header	Payload
---------	----------	------------------	--------	---------

Table 15: Packet format, high sensitivity mode

Packet Information	Length	Description
Marking	14 ms	Initial frequency step used to lock high sensitivity demodulator.
Preamble = N * "11001100"	2 byte	Clock recovery initialization.
3 * Address Byte	3 byte	The preamble consists of 3 Address byte Address [7:0] .
Header	0 or 1 byte	The 5 LSB's of the header represent the payload size of the packet for communication subroutine available @ ROM_Boot_Address = 256 . For communication subroutine available @ ROM_Boot_Address = 128 , header is not existing.
Payload	0-32 bytes	Data

The size of the received packet including header and payload (stored in **RXFIFO**) can be read with the SPI command **Read_RXFIFO_Size** (see [Section 5.1.1.4](#)). When **RXFIFO** has been completely read (until **RXFIFO_Size[4..0] = 0**) after the previous reception, **RXFIFO_Size[4..0]** of the current packet is then the total packet size including the header.

The header byte is treated like a standard payload byte and must be stored in the **TX_FIFO** before the payload data prior to transmit the packet in any mode.

For each byte, the MSBit is sent first.

7. Versions and ordering information

The EM9209 is available in one Version as summarized in Table 16 below. The internal revision can be read in **RAM1** (see [Section 5.1.1.6](#)) at the address 63 after executing the SPI command **ROM_Boot** (see [Section 5.1.1.16](#)) with argument **ROM_Boot_Address = 0**. Internal revision release format is *xyxy*, with *xx* = year (decimal) and *yy* = month (decimal).

Table 16: Version information

Version	Description /Features	Applications / Comments
1	Base 2.4GHz transceiver - 26MHz crystal required	RF application when 1.9V to 3.6V Supply is available

Table 17: Ordering information

Ordering Code	Description	Packaging	Container
EM9209V01WW7+	1.5 to 72kbps Transceiver	Wafer	Wafer container
EM9209V01WS7+	1.5 to 72kbps Transceiver	Sawn wafer on tape	Wafer container
EM9209V01LF24B+	1.5 to 72kbps Transceiver	MLF24	Tape and Reel

8. Die Pinout

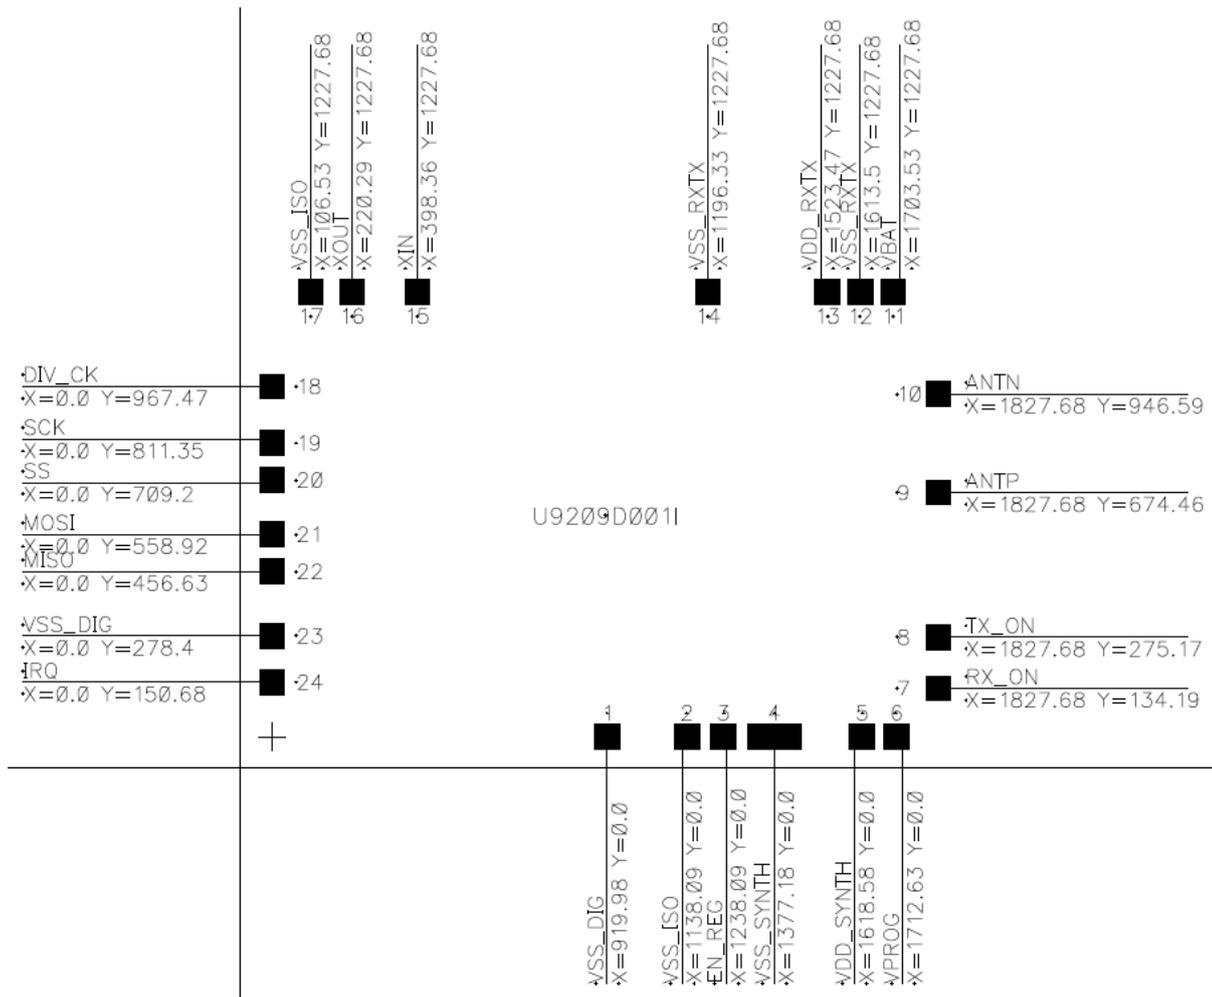
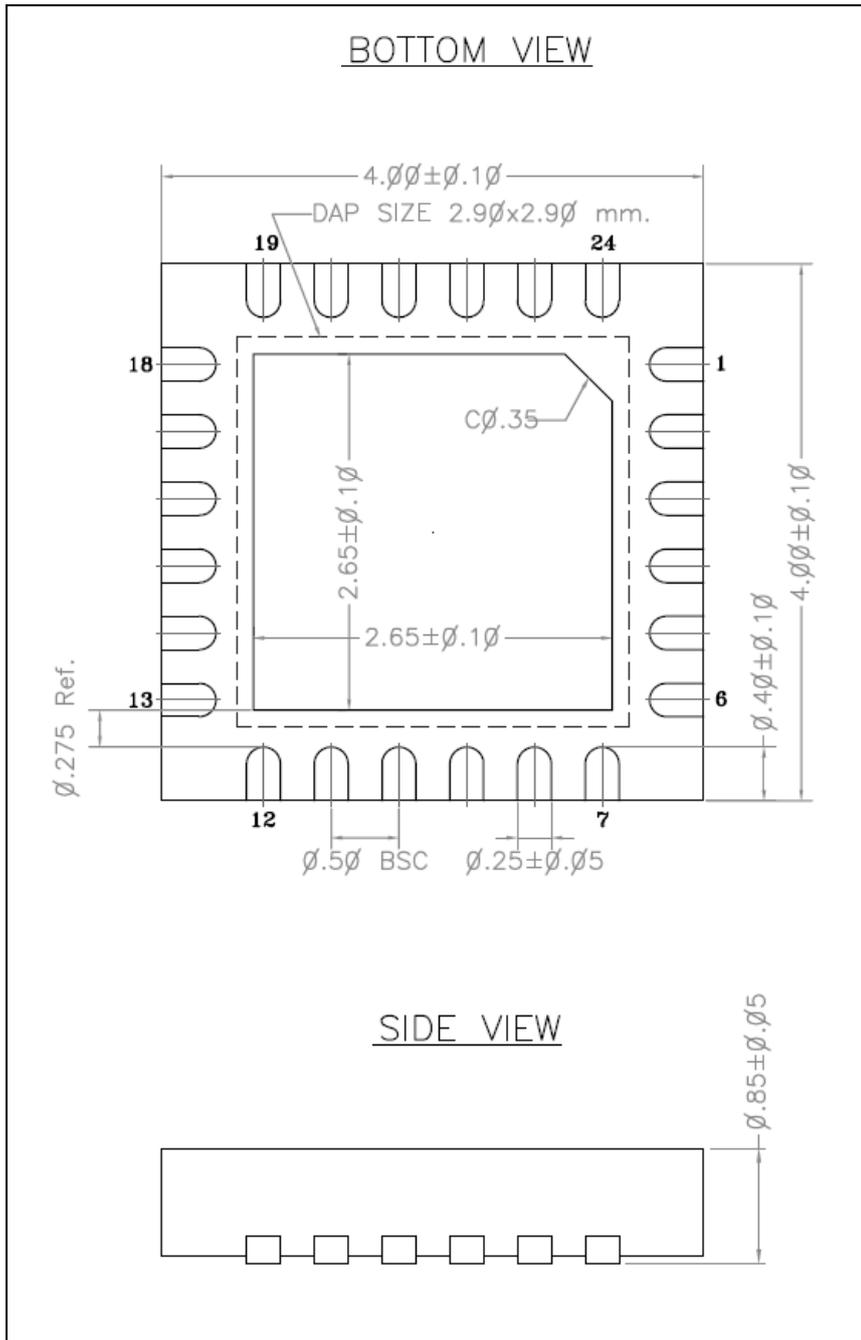


Figure 7: U9209 Die Pinout.
Die Size is 2000 x 1400 um.

9. Package information

MLF24 4mm x 4mm


9.1 Package marking

	1	2	3	4	5
A	9	2	0	9	0
B	0	1			
C					

A1-A4: Device type "9209"

A5, B1-B2: Version "001"

B3-B4: Week Number of Assembly (date of shipment from EM)

B5: Blank

C1-C4: Diffusion Lot Number (without year of diffusion & split)

C5: Assembly House Code

10. Typical Applications

In this chapter, typical application scenarios for the EM9209 are described.

10.1 Application schematics

A typical application schematic for EM9209 is shown in Figure 8. The pins *VBAT*, *VDD_SYNTH* and *VDD_RXTX* are decoupled with three 1µF capacitors (C1-C3). A 26MHz crystal (X1) is required for the RF and digital clock (crystal CL should be 10pF). Finally a 200-Ohm PCB antenna (A1) can be used for the wireless link, or a 1:4 balun (50Ω : 200Ω) can be used to interface to standard 50-Ohm antennas or test equipment.

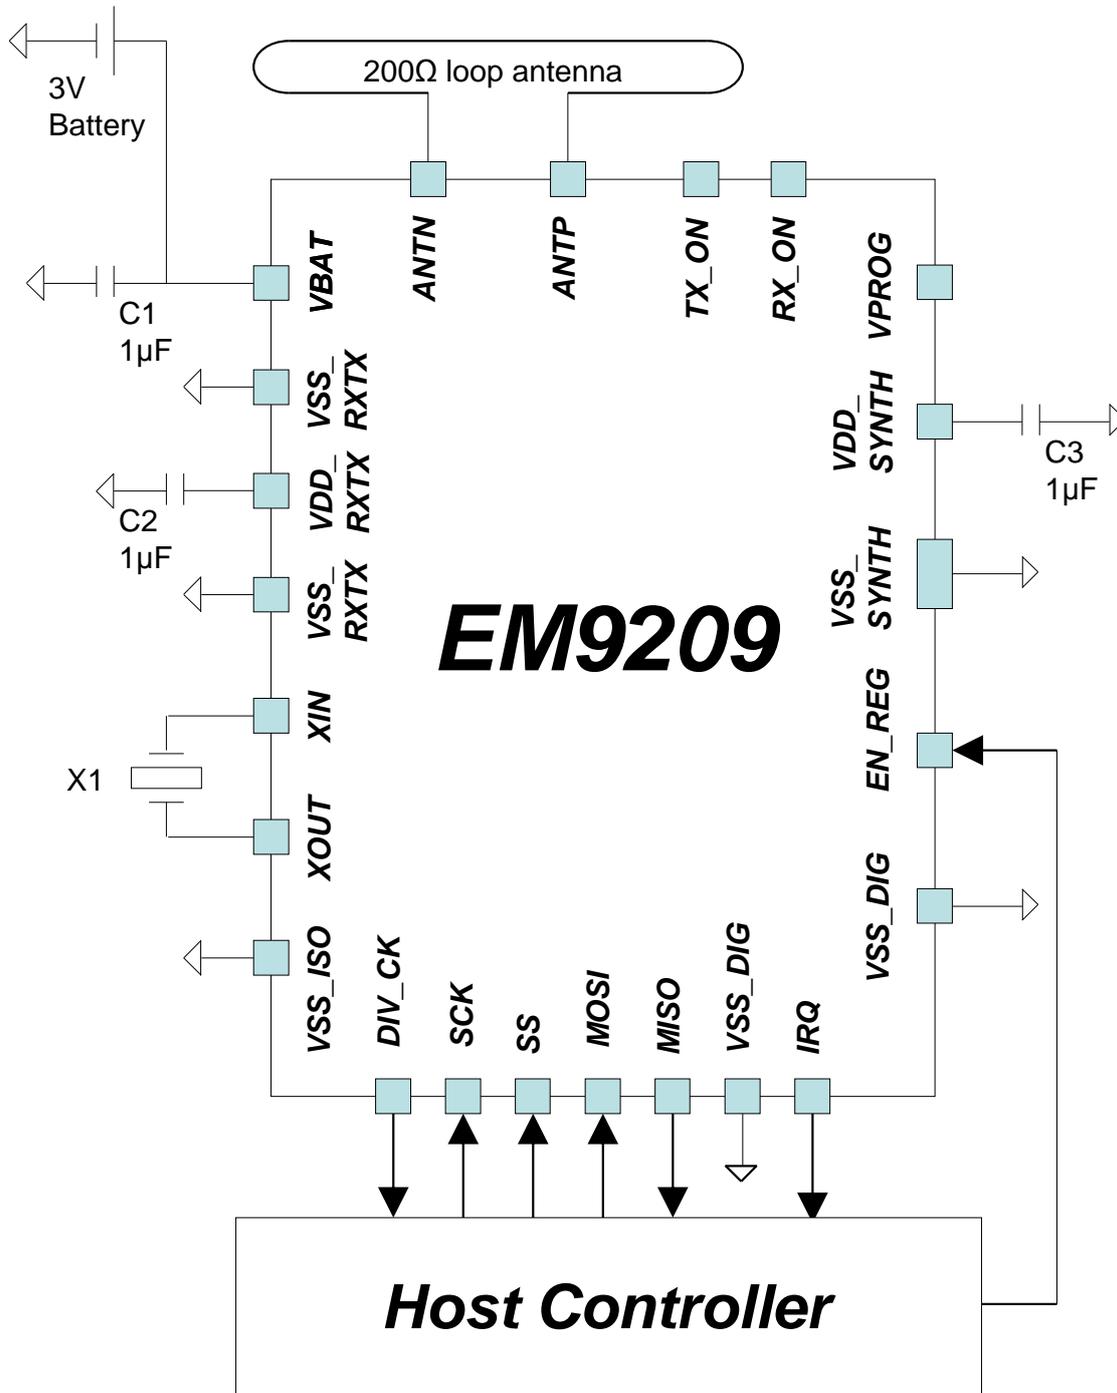


Figure 8: Example application schematic of the EM9209

External component values, footprint, tolerance, and other requirements are shown in Table 18 for both of the example applications schematics.

Table 18: EM9209 application schematic external component details

Component	Version	Notes	Value	Footprint	Description
A1	1		200Ω	-	Printed loop antenna
C1	1		1μF	0402	V _{BAT} decoupling capacitor, ±10%
C2	1		1μF	0402	V _{DD_RXTX} decoupling capacitor, ±10%
C3	1		1μF	0402	V _{DD_SYNTH} decoupling capacitor, ±10%
X1	1	1,2	26MHz	-	Crystal, ±20ppm, Example: TSS-3225J, CL=10pF

Note 1: Built in capacitors against ground are around 19 pF. 1 pf is left for bonding wire and PCB crystal pad.

Note 2: Crystal circuit tolerance calibrated after board soldering. Temperature dependence and aging shall not exceed ±20ppm.

EM Microelectronic-Marín SA ("EM") makes no warranties for the use of EM products, other than those expressly contained in EM's applicable General Terms of Sale, located at <http://www.emmicroelectronic.com>. EM assumes no responsibility for any errors which may have crept into this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein.

No licenses to patents or other intellectual property rights of EM are granted in connection with the sale of EM products, neither expressly nor implicitly.

In respect of the intended use of EM products by customer, customer is solely responsible for observing existing patents and other intellectual property rights of third parties and for obtaining, as the case may be, the necessary licenses.

Important note: The use of EM products as components in medical devices and/or medical applications, including but not limited to, safety and life supporting systems, where malfunction of such EM products might result in damage to and/or injury or death of persons is expressly prohibited, as EM products are neither destined nor qualified for use as components in such medical devices and/or medical applications. The prohibited use of EM products in such medical devices and/or medical applications is exclusively at the risk of the customer